 



 
 

 

 
 
 
 
 

 
 







 




 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH/Page Down		Ch -
	Sleep		Sleep		Vol+		Vol +
	CBL/SAT		1		Vol-		Vol -
	DVD		2		Mute		Mute
	Blu-ray		3		Info		Info
	Game		4		Option		Options
	AUX		5		Back		Back
	Media Player		6		Setup		Menu
	Phono		7		Up		Up
	TV Audio		8		Down		Down
	Tuner		9		Right		Right
	USB		Guide		Left		Left
	Bluetooth		0		Enter		Ok
	Internet Radio		Pre Ch		I<</Tune-		I<<
	Eco		Media		Play		Play
	Eco		3D		Pause		Pause
	CH/Page Up		Ch +		>>I/Tune+		>>I

 







 
 



 

 
 
 

 



 

 


 


 

 

 

 
 


 
 




 

 
 
 


 



 

 











Originale		Sostituto		Originale		Sostituto	
	Quick Select 1		D. Menu				
	Quick Select 2		Text				
	Quick Select 3		Eject				
	Quick Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 CBL/SAT	 1	 Mute	 Mute
 DVD	 2	 Back	 Back
 Blu-ray	 3	 Up	 Up
 Game	 4	 Down	 Down
 AUX	 5	 Right	 Right
 Media Player	 6	 Left	 Left
 Phono	 7	 Enter	 Ok
 TV Audio	 8	 I<</Tune-	 I<<
 Tuner	 9	 Play	 Play
 USB	 Guide	 Pause	 Pause
 Bluetooth	 0	 >>I/Tune+	 >>I
 Internet Radio	 Pre Ch	 Quick Select 1	 D. Menu
 :I:	 Media	 Quick Select 2	 Text
 CH/Page Up	 Ch +	 Quick Select 3	 Eject
 CH/Page Down	 Ch -	 Quick Select 4	 AV

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 TV	 AUX
 DVD	 SAT	 DUAL	 SUBT
 SLEEP	 OPT	 SOUND	 AD
 CBL/SAT	 ECO	 DISC NAV	 SETTINGS
 GAME	 3D	 LIST	 AV
 PHONO	 TIMER	 SEARCH	 PICTURE
 USB	 D.MENU	 TV/R	 FORMAT
 Bluetooth	 TEXT	 REPEAT	 ZOOM
 CH/PAGE UP	 INFO	 E-MANUAL	 D.MENU
 CH/PAGE DOWN	 MENU	 REPEAT	 D.MENU
 ENTER	 OK	 TEXT	 D.MENU
 MUTE	 RETURN BACK	 ZOOM	 D.MENU
 VOL +	 BACK	 ZOOM	 D.MENU
 VOL -	 EXIT	 ZOOM	 D.MENU
 MUTE	 HOME	 ZOOM	 D.MENU
 CBL/SAT	 SMART	 ZOOM	 D.MENU
 DVD	 APP	 ZOOM	 D.MENU
 SLEEP	 MEDIA	 ZOOM	 D.MENU
 GAME	 CH +	ZOOM	 D.MENU
PHONO	CH -	ZOOM	D.MENU
USB	CH +	ZOOM	D.MENU
Bluetooth	CH -	ZOOM	D.MENU
Internet Radio	CH +	ZOOM	D.MENU
ECO	CH -	ZOOM	D.MENU
CH/PAGE UP	CH +	ZOOM	D.MENU
CH/PAGE DOWN	CH -	ZOOM	D.MENU

