



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu
	Open / Close		Eject		Setup		Options
	P/N		3D		Up		Up
	Prog		Sleep		Left		Left
	Mark		Pre Ch		Enter		Ok
	1		1		Right		Right
	2		2		Down		Down
	3		3		Title		List
	4		4		OSD		Info
	5		5		Stop		Stop
	6		6		Play/Pause		Play
	7		7		Step		Pause
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		FB		<<
	10+		Guide		FF		>>
	Clear		Exit		Prev		I<<





Originale		Sostituto		Originale		Sostituto	
	Next		>>				
	Mute		Mute				
	Audio		Dual				
	Zoom		Shift + Eject				
	Sub-T		Subt				
	Goto		Green				
	Angle		Red				
	Repeat		Text				
	A-B		Shift + Text				
	Slow		Shift + Play				
	Video		Smart				
	V-Remote		Media				
	Default		Blue				

