


 
 
 

 

 















 


 









 
 
 








 

 


 

 


 





 

| Originale   | Sostituto  |
|---|--|
|  Power On        |  Power            |
|  Power Off       |  Shift + Power    |
|  Zone Device On  |  Smart            |
|  Zone Device Off |  Shift + Smart    |
|  Net/USB         |  Shift + 1        |
|  iPod            |  Shift + 2        |
|  DVD             |  Shift + 3        |
|  BD              |  Shift + 4        |
|  Tuner/DTU       |  Shift + 5        |
|  Dock            |  Shift + 6        |
|  SAT TU         |  Shift + 7       |
|  SAT/CBL       |  Shift + 8      |
|  Game          |  Shift + 9      |
|  V.AUX         |  Shift + Guide  |
|  Phono         |  Shift + 0      |
|  CD            |  Shift + Pre Ch |
|  DVR           |  Blue           |

| Originale  | Sostituto   |
|--|---|
|  TV                       |  Shift + Media |
|  Monitor Select           |  Media         |
|  Quick Select 1           |  Red           |
|  Quick Select 2 (SAT/CBL) |  Green         |
|  Quick Select 3 (Dock)    |  Yellow        |
|  CH+                      |  Ch +          |
|  CH-                      |  Ch -          |
|  Vol+                     |  Vol +         |
|  Vol-                     |  Vol -         |
|  Mute                     |  Mute          |
|  Source Select           |  AV           |
|  Menu                   |  Menu        |
|  CH Level/Top           |  Info        |
|  Search/Setup           |  Options     |
|  Return                 |  Back        |
|  Up                     |  Up          |
|  Down                   |  Down        |





 

 
 
 
 















 










| Originale  | Sostituto  |
|--|--|
|  Right        |  Right    |
|  Left         |  Left     |
|  Enter        |  Ok       |
|  <</Band      |  <<       |
|  Play         |  Play     |
|  >>/Mode      |  >>       |
|  I<</Tuning-  |  I<<      |
|  Pause        |  Pause    |
|  Stop         |  Stop     |
|  >>I/Tuning+  |  >>I      |
|  Multeq      |  Subt    |
|  Dyn EQ/Vol |  Text   |
|  A-DSX      |  TV/R   |
|  Restorer   |  Exit   |
|  Standard   |  Dual   |
|  D/ST       |  Format |
|  Simulation |  3D     |

| Originale   | Sostituto  |
|---|--|
|  Pure              |  Pre Ch         |
|  1                 |  1              |
|  2                 |  2              |
|  3                 |  3              |
|  4                 |  4              |
|  5                 |  5              |
|  6                 |  6              |
|  7                 |  7              |
|  8                 |  8              |
|  9                 |  9              |
|  0                |  0             |
|  +10/Memory      |  Guide        |
|  Shift/Link Menu |  D. Menu      |
|  Power Tv        |  Shift + TV/R |
|  Input Tv        |  Shift + AV   |
|  Sleep           |  Sleep        |
|  Party           |  List         |





| Originale   | Sostituto   |
|---|---|
|  Power On        |  Power           |
|  Power Off       |  Shift + Power   |
|  Zone Device On  |  Smart           |
|  Zone Device Off |  Shift + Smart   |
|  Net/USB         |  Shift + 1       |
|  iPod            |  Shift + 2       |
|  DVD             |  Shift + 3       |
|  BD              |  Shift + 4       |
|  Tuner/DTU       |  Shift + 5       |
|  Dock            |  Shift + 6       |
|  SAT TU         |  Shift + 7      |
|  SAT/CBL       |  Shift + 8     |
|  Game          |  Shift + 9     |
|  V.AUX         |  Shift + Guide |
|  Phono         |  Shift + 0     |
|  CD            |  Pre Ch        |
|  DVR           |  Blue          |

| Originale  | Sostituto   |
|--|---|
|  TV                       |  Media     |
|  Quick Select 1           |  Red       |
|  Quick Select 2 (SAT/CBL) |  Green     |
|  Quick Select 3 (Dock)    |  Yellow    |
|  CH+                      |  Ch +      |
|  CH-                      |  Ch -      |
|  Vol+                     |  Vol +     |
|  Vol-                     |  Vol -     |
|  Mute                     |  Mute      |
|  Menu                     |  Menu      |
|  CH Level/Top            |  Info     |
|  Search/Setup           |  Options |
|  Return                 |  Back    |
|  Up                     |  Up      |
|  Down                   |  Down    |
|  Right                  |  Right   |
|  Left                   |  Left    |






 

 
 
 














 
 

 

 
 




| Originale   | Sostituto |
|-------------|-----------|
|             |           |
| Enter       | Ok        |
|             |           |
| <</Band     | <<        |
|             |           |
| Play        | Play      |
|             |           |
| >>/Mode     | >>        |
|             |           |
| I<</Tuning- | I<<       |
|             |           |
| Pause       | Pause     |
|             |           |
| Stop        | Stop      |
|             |           |
| >>I/Tuning+ | >>I       |
|             |           |
| 1           | 1         |
|             |           |
| 2           | 2         |
|             |           |
| 3           | 3         |
|             |           |
| 4           | 4         |
|             |           |
| 5           | 5         |
|             |           |
| 6           | 6         |
|             |           |
| 7           | 7         |
|             |           |
| 8           | 8         |
|             |           |
| 9           | 9         |

| Originale       | Sostituto |
|-----------------|-----------|
|                 |           |
| 0               | 0         |
|                 |           |
| +10/Memory      | Guide     |
|                 |           |
| Shift/Link Menu | D. Menu   |
|                 |           |
| Power Tv        | TV/R      |
|                 |           |
| Input TV        | AV        |
|                 |           |
| Sleep           | Sleep     |
|                 |           |
| Party           | List      |





| Originale   | Sostituto   |
|---|---|
|  Power On        |  Power           |
|  Power Off       |  Shift + Power   |
|  Zone Device On  |  Smart           |
|  Zone Device Off |  Shift + Smart   |
|  Net/USB         |  Shift + 1       |
|  iPod            |  Shift + 2       |
|  DVD             |  Shift + 3       |
|  BD              |  Shift + 4       |
|  Tuner/DTU       |  Shift + 5       |
|  Dock            |  Shift + 6       |
|  SAT TU         |  Shift + 7      |
|  SAT/CBL       |  Shift + 8     |
|  Game          |  Shift + 9     |
|  V.AUX         |  Shift + Guide |
|  Phono         |  Shift + 0     |
|  CD            |  Pre Ch        |
|  DVR           |  Blue          |

| Originale  | Sostituto   |
|--|---|
|  TV                       |  Media     |
|  Quick Select 1           |  Red       |
|  Quick Select 2 (SAT/CBL) |  Green     |
|  Quick Select 3 (Dock)    |  Yellow    |
|  CH+                      |  Ch +      |
|  CH-                      |  Ch -      |
|  Vol+                     |  Vol +     |
|  Vol-                     |  Vol -     |
|  Mute                     |  Mute      |
|  Menu                     |  Menu      |
|  CH Level/Top            |  Info     |
|  Search/Setup           |  Options |
|  Return                 |  Back    |
|  Up                     |  Up      |
|  Down                   |  Down    |
|  Right                  |  Right   |
|  Left                   |  Left    |






| Originale   | Sostituto |
|-------------|-----------|
| Enter       | Ok        |
| <</Band     | <<        |
| Play        | Play      |
| >>/Mode     | >>        |
| I<</Tuning- | I<<       |
| Pause       | Pause     |
| Stop        | Stop      |
| >>I/Tuning+ | >>I       |
| 1           | 1         |
| 2           | 2         |
| 3           | 3         |
| 4           | 4         |
| 5           | 5         |
| 6           | 6         |
| 7           | 7         |
| 8           | 8         |
| 9           | 9         |

| Originale       | Sostituto |
|-----------------|-----------|
| 0               | 0         |
| +10/Memory      | Guide     |
| Shift/Link Menu | D. Menu   |
| Power Tv        | TV/R      |
| Input Tv        | AV        |
| Party           | List      |
| Sleep           | Sleep     |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |
|                 |           |




 

 
 
 


 





 

 

 

 

 
 


| Originale   | Sostituto   |
|---|---|
|  Power On        |  Power           |
|  Power Off       |  Shift + Power   |
|  Zone Device On  |  Smart           |
|  Zone Device Off |  Shift + Smart   |
|  NET/USB         |  Shift + 1       |
|  iPod            |  Shift + 2       |
|  DVD             |  Shift + 3       |
|  BD              |  Shift + 4       |
|  Tuner/DTU       |  Shift + 5       |
|  Dock            |  Shift + 6       |
|  SAT TU         |  Shift + 7      |
|  SAT/CBL       |  Shift + 8     |
|  Game          |  Shift + 9     |
|  V.AUX         |  Shift + Guide |
|  Phono         |  Shift + 0     |
|  CD            |  Pre Ch        |
|  DVR           |  Blue          |

| Originale  | Sostituto   |
|--|---|
|  TV                       |  Media   |
|  Quick Select 1           |  Red     |
|  Quick Select 2 (SAT/CBL) |  Green   |
|  Quick Select 3 (Dock)    |  Yellow  |
|  CH+                      |  Ch +    |
|  CH-                      |  Ch -    |
|  Vol+                     |  Vol +   |
|  Vol-                     |  Vol -   |
|  Mute                     |  Mute    |
|  Search/Setup             |  Options |
|  <</Band                 |  <<     |
|  Play                   |  Play  |
|  >>/Mode                |  >>    |
|  I<</Tuning-            |  I<<   |
|  Pause                  |  Pause |
|  Stop                   |  Stop  |
|  >>I/Tuning+            |  >>I   |





|   | Originale       | Sostituto   |         | Sostituto |
|---|-----------------|---|---------|-----------|
|    | 1               |    | 1       |           |
|    | 2               |    | 2       |           |
|    | 3               |    | 3       |           |
|    | 4               |    | 4       |           |
|    | 5               |    | 5       |           |
|    | 6               |    | 6       |           |
|    | 7               |    | 7       |           |
|    | 8               |    | 8       |           |
|    | 9               |    | 9       |           |
|    | 0               |    | 0       |           |
|   | +10/Memory      |   | Guide   |           |
|  | Power Tv        |  | TV/R    |           |
|  | Shift/Link Menu |  | D. Menu |           |
|  | Input Tv        |  | AV      |           |
|  | Sleep           |  | Sleep   |           |
|  | Party           |  | List    |           |

|  | Originale | Sostituto |
|--|-----------|-----------|
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |
|  |           |           |

