


 




 

 
 


 
 


 















 



 



 

 
 
 
 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 AM	 Media
 Sleep	 Sleep	 < Preset	 Ch -
 Dimmer	 List	 Preset >	 Ch +
 Speakers A	 Red	 Pop-Up Menu	 Menu
 Speakers B	 Green	 Home	 Smart
 Coaxial	 1	 NDW Playing	 Blue
 Optical	 2	 Up	 Up
 Net	 3	 Down	 Down
 Line 1	 4	 Right	 Right
 Line 2	 5	 Left	 Left
 Line 3	 6	 Enter	 Ok
 Mode	 Format	 Setup	 D. Menu
 Tuner	 7	 Return	 Back
 CD	 8	 Volume+	 Vol +
 FM	 TV/R	 Volume-	 Vol -
 << Tuning	 <<	 Mute	 Mute
 Tuning >>	 >>	 Stop	 Stop

Originale	Sostituto	Originale	Sostituto
 MUTE	 SHIFT	 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SLEEP	 DUAL	 SOUND	 AD
 E-MANUAL	 SUBT	 DISC NAV	 SETTINGS
 D.MENU	 OPT	 LIST	 ECO
 REPEAT	 3D	 PROG	 TIMER
 ZOOM	 AV	 SEARCH	
 TEXT		 PICTURE	
		 FORMAT	
		 TOP MENU	
		 DISPLAY	
		 MENU	 INFO
		OK	
		EXIT	BACK
		HOME	
		SMART	
		APP	
		MEDIA	
		VOL +	CH +
		VOL -	CH -
		1	2
		2	3
		3	4
		4	5
		5	6
		6	7
		7	8
		8	9
		9	FAV
		GUIDE	PRE-CH
		A	B
		C	D
			
			





Originale	Sostituto	Originale	Sostituto

Originale	Sostituto

