



| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  EQ |  Subtitle / EQ |
|  LG EQ |  Audio / Lang I/II |
|  Open/Close |  Eject / Surround |
|  Preset/Folder+ |  CH+ / Page+ |
|  Function |  Smart / List |
|  Vol+ |  Vol+ |
|  Preset/Folder- |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  Vol- |  Vol- |
|  Sleep |  Sleep / Timer |
|  Repeat |  Green / APP / Repeat |
|  Repeat |  Up |
|  Info |  Info / Angle |
|  << / I<< / Tun- |  << / Tune- |
|  << / I<< / Tun- |  I<< / Preset- |
|  << / I<< / Tun- |  Left |

| Originale | Sostituto |
|--|--|
|  Stop |  Stop / Hold |
|  Stop |  OK |
|  >> / >>I / |  >> / Tune+ |
|  >> / >>I / |  >>I / Preset+ |
|  >> / >>I / |  Right |
|  Program/Memo |  TV/Radio / |
|  Play/Pause |  Play / Slow |
|  Play/Pause |  Pause / Step / Freeze |
|  Play/Pause |  Down |
|  Rec |  Rec / Rec Mode |
|  Clock |  Shift + Sleep / Timer |
|  Time |  Menu / Home |
|  Set/RDS |  D.Menu / Top |
|  PTY |  Setup / OPT / |
| | |
| | |
| | |

