 
 

 


 

 





 

 

 

 

 



 

 

 

 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Exit	 Exit
 Text	 Text
 Audio I/II	 Dual
 Display	 Info
 Sleep	 Sleep
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 Red / Source	 AV
 Red / Source	 Shift + Red
 Green / TV	 Menu
 Green / TV	 Shift + Green
 Yellow / PMode	 Format
 Yellow / PMode	 Shift + Yellow

Originale	Sostituto
 Blue / SMode	 Shift + Dual
 Blue / SMode	 Shift + Blue
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto
 -/--	 Shift + Guide
 Recall	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue / Repeat	 Blue
 Blue / Repeat	 Shift + Text
 Subtitle	 Subt
 Pause/Play / Hold	 Play
 Pause/Play / Hold	 Pause
 Size	 3D
 Mix	 D. Menu
 Reveal	 Shift + Info
 TXT Index	 Eject
 I<< / Subpage	 I<<
 >>I / Lang	 >>I
 Stop / FAV -	 Stop

Originale	Sostituto
 Stop / FAV -	 Shift + Left
 << / FAV	 <<
 << / FAV	 Pre Ch
 >> / FAV+	 >>
 >> / FAV+	 Shift + Right
 EPG	 Guide
 USB/SD	 Media
 Recorder	 Rec
 CH.List	 List
 TV / Radio	 TV/R

