
 
 

 


 

 


 





 

 




 

 







 

 



 
 




Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8	 8	Nicam/Mono	 +  Shift + Green
9	 9	Level L	 +  Shift + Yellow
Guide -/-- 1.	 GUIDE	Level R/Woofer	 +  Shift + Blue
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Green	 B		
Yellow	 C		
Blue	 D		
Audio-	 <<		
Audio+	 >>		
Tone-	 +  Shift + Stop		
Mix Scan	 LIST		
Color+ P.Std	 FORMAT		
Color- S.Std	 +  Shift + Dual		
AV 2	 +  Shift + AV		
Surround	 +  Shift + Red		

