


 

 
 
 
 


 

 


 
 





 
 
 

 
 






 

 

 



 

 





 





 

 












Originale		Sostituto		Originale		Sostituto	
	System Power		Power		Play/Pause		Pause
	Title/Character		List		Play/Pause MD		Ok
	Time		AV		Play/Pause CD		Play
	Random/RDS		Subt		Vol+		Vol +
	Edit		Options		Vol-		Vol -
	<< Tuning		<<		Disc Skip		TV/R
	>> Tuning Up		>>		Call/Panel		Back
	Enter Memory		Dual		Display		Info
	Sleep		Sleep		1		1
	Repeat/PTY		Text		2		2
	Tuner		Smart		3		3
	Tone/SDB		Format		4		4
	Function		Menu		5		5
	>>I/+Preset		>>I		6		6
	I<<-/-Preset		I<<		7		7
	Prog/Direct/Group CT		Media		8		8
	Stop/Band		Stop		9		9



