

 

 
 
 
 



 



 
 
 

 
 
 

 

 
 

 


 






Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Internet	 List
 Netflix	 Media
 Miracast	 Guide
 DLNA	 Info
 PopUp Menu	 Menu

Originale	Sostituto
 Top Menu	 D. Menu
 Home	 Smart
 Return	 Back
 Option	 Options
 OK	 Ok
 Up	 Up
 Down	 Down
 Right/II>	 Right
 <II/Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Play	 Play
 >>	 >>
 <<	 <<
 Pause	 Pause





Originale	Sostituto
	>>
	<<
	Stop
	AD SUBT
	SOUND DUAL
	ECO 3D
	CLEAR EXIT
	TIMER AV
	SEARCH TV/R
	REPEAT TEXT
	PICTURE FORMAT
	CH -
	+ CH
	SHIFT + Shift + Power
	SHIFT + Shift + AV
	MUTE
	+ VOL

Originale	Sostituto
	Vol - Tv
	CH+ Tv
	CH- Tv

