


 
 
 




 

 







Originale	Sostituto
 Standby	 Power
 Info	 Info
 Mute	 Mute
 P.Mode	 Format
 S.Mode	 Dual
 Zoom	 Shift + Eject
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0


 






Originale	Sostituto
 Freeze	 Pause
 TV/Radio	 TV/R
 FAV	 Pre Ch
 Source	 AV
 Recall	 Back
 CH List	 List
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 LCD Menu	 Menu
 EPG / DVD	 Guide



Menu



Originale	Sostituto	Originale	Sostituto
 EPG / DVD	 D. Menu	 I<< / Yellow	 I<<
 Audio	 Shift + Dual	 I<< / Yellow	 Yellow
 Exit / DVD Setup	 Exit	 >>I / Blue	 >>I
 Exit / DVD Setup	 Options	 >>I / Blue	 Blue
 TXT	 Text		
 Index / Angle	 Smart		
 Size	 3D		
 Subtitle	 Subt		
 Mix / Open/Close	 Shift + Text		
 Mix / Open/Close	 Eject		
 Play/Pause /	 Play		
 Stop / Hold	 Stop		
 A-B / Subpage	 Media		
 << / Red	 Red		
 << / Red	 <<		
 >> / Green	 >>		
 >> / Green	 Green		

Originale	Sostituto	Originale	Sostituto
 I<< / Yellow	 I<<		
 I<< / Yellow	 Yellow		
 >>I / Blue	 >>I		
 >>I / Blue	 Blue		

