






 


















 
 
 











Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/--	 Guide
 Swap	 Back
 TV/AV	 AV
 Game	 Smart
 Text	 Text

Originale	Sostituto
 Menu	 Menu
 P.Std	 Format
 S.Std	 Dual
 P+	 Ch +
 P+	 Up
 P-	 Ch -
 P-	 Down
 V+	 Vol +
 V+	 Right
 V-	 Vol -
 V-	 Left
 Red / Picture	 Red
 Green / Sound	 Green
 Green / Sound	 Shift + Dual
 Yellow / Time	 Yellow
 Blue / Setup	 Blue
 Blue / Setup	 Options





Originale	Sostituto	Originale	Sostituto
 White / Index	 Info		
 Reveal	 Play		
 Zoom	 Eject		
 East/West	 Pause		
 Mix	 D. Menu		
 Lock	 3D		
 Cancel	 Exit		
 Hold	 Stop		
 Subcode	 Subt		

Originale	Sostituto

