



Originale	Sostituto
On	Power
Standby	Shift + Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Input Selector Multi CH	8
Input Selector	2
Input Selector	5
Input Selector Tuner	6
Input Selector CD	3
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
CH/Disc+	CH+ / Page+
Vol+	Vol+
CH/Disc-	CH- / Page-
Vol-	Vol-
SP A/B	Menu / Home

Originale	Sostituto
Up	Up
Muting	Mute / Dimmer
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause/<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
I<< / Preset-	I<< / Preset-
>>I / Preset+	>>I / Preset+
List. Mode Stereo	Red / Netflix / Search
List. Mode	Eject / Surround





Originale	Sostituto
List. Mode	Green / APP / Repeat
Listening Mode <	Yellow / YouTube / Repeat
Listening Mode >	Blue / Prime Video / Random
Test Tone	Text / Goto
CH Sel	Info / Angle
Level-	+  Shift + Left
Level+	+  Shift + Right
Display	Display / Media
L.Night	+  Shift + Sleep / Timer
Cine FLTR	Picture / Format

Originale	Sostituto





Originale	Sostituto
On	Power
Standby	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0
CLR	Exit / Cancel / Clear
CH/Disc+	CH+ / Page+
CH/Disc-	CH- / Page-
Top Menu	D.Menu / Top

Originale	Sostituto
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ





Originale		Sostituto		Originale		Sostituto	
	Random		Blue / Prime Video / Random				
	Repeat		Green / APP / Repeat				
	Display		Display / Media				

