





























Originale	Sostituto
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Input Selector Multi CH	8
Input Selector DVD	2
Input Selector TAPE	5
Input Selector TUNER	6
Input Selector CD	3
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
CH/Disc/Album	CH+ / Page+
Vol+	Vol+
Input Tv	Shift + AV / Input / RDS
Vol- Tv	Shift + Vol-

Originale	Sostituto
CH/Disc/Album-	CH- / Page-
Vol-	Vol-
Guide/Top	Guide / EPG / -/-
Guide/Top	D.Menu / Top
Up	Up
Muting	Mute / Dimmer
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+






Originale	Sostituto	Originale	Sostituto
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Listening Mode Stereo	 Subtitle / EQ		
 Listening Mode Surround	 Eject / Surround		
 Listening Mode <	 Sound / Title		
 Listening Mode >	 Audio / Lang I/II		
 Test Tone	 Red / Netflix / Search		
 CH Sel	 Green / APP / Repeat		
 Level-	 Yellow / YouTube / Repeat		
 Level+	 Blue / Prime Video / Random		
 Display	 Display / Media		
 L.Night	 Zoom / Size		
 Cine FLTR	 Picture / Format		







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left/Playlist/Cat-	 Left
 1	 1	 Enter	 OK
 2	 2	 Right/Playlist/Cat	 Right
 3	 3	 Return	 Back / Return
 4	 4	 Down	 Down
 5	 5	 Setup	 Setup / OPT /
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 9	 9	 <<	 << / Tune-
 +10/10/-/-	 Guide / EPG / -/-	 >>	 >> / Tune+
 0/11	 0	 I<<	 I<< / Preset-
 CLR	 Exit / Cancel / Clear	 >>I	 >>I / Preset+
 Top Menu	 D.Menu / Top	 Stereo	 Shift + Subtitle / EQ
 Up	 Up	 Surround	 Shift + Eject / Surround
 Previous Menu/Muting	 Menu / Home	 < Listening Mode	 Shift + Sound / Title
 Previous Menu/Muting	 Mute / Dimmer	 Listening Mode >	 Shift + Audio / Lang I/II

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left/Playlist/Cat-	 Left
 1	 1	 Enter	 OK
 2	 2	 Right/Playlist/Cat	 Right
 3	 3	 Return	 Back / Return
 4	 4	 Down	 Down
 5	 5	 Setup	 Setup / OPT /
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 9	 9	<<	<< / Tune-
+10/10/-/-	Guide / EPG / -/-	>>	>> / Tune+
0/11	0	I<<	I<< / Preset-
CLR	Exit / Cancel / Clear	>>I	>>I / Preset+
Top Menu	D.Menu / Top	Stereo	Shift + Subtitle / EQ
Up	Up	Surround	Shift + Eject / Surround
Previous Menu/Muting	Menu / Home	< Listening Mode	Shift + Sound / Title
Previous Menu/Muting	Mute / Dimmer	Listening Mode >	Shift + Audio / Lang I/II



















Originale	Sostituto	Originale	Sostituto
 On / Standby	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Play	 Play / Slow
 2	 2	 Stop	 Stop / Hold
 3	 3	 <<	 << / Tune-
 4	 4	 >>	 >> / Tune+
 5	 5	 I<<	 I<< / Preset-
 6	 6	 >>I	 >>I / Preset+
 7	 7	 Stereo	 Subtitle / EQ
 8	 8	 Surround	 Eject / Surround
 9	 9	 < Listening Mode	 Sound / Title
 +10/10/-/-	 Guide / EPG / -/-	 Listening Mode >	 Audio / Lang I/II
 0/11	 0	 Random	 Blue / Prime Video / Random
 12	 Fav / Marker / PC	 Repeat	 Green / APP / Repeat
 Disc+	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc-	 CH- / Page-		
 Vol-	 Vol-		

Originale	Sostituto	Originale	Sostituto
 On / Standby	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Play	 Play / Slow
 2	 2	 Stop	 Stop / Hold
 3	 3	 <<	 << / Tune-
 4	 4	 >>	 >> / Tune+
 5	 5	 I<<	 I<< / Preset-
 6	 6	 >>I	 >>I / Preset+
 7	 7	 Stereo	 Subtitle / EQ
 8	 8	 Surround	 Eject / Surround
 9	 9	 < Listening Mode	 Sound / Title
 +10/10/-/-	 Guide / EPG / -/-	 Listening Mode >	 Audio / Lang I/II
 0/11	 0	 Random	 Blue / Prime Video / Random
 12	 Fav / Marker / PC	 Repeat	 Green / APP / Repeat
 Disc+	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc-	 CH- / Page-		
 Vol-	 Vol-		





Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/10/--		Guide / EPG / --
	0/11		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold

Originale		Sostituto	
	<<		<< / Tune-
	Stereo		Subtitle / EQ
	Surround		Eject / Surround
	< Listening Mode		Sound / Title
	Listening Mode >		Audio / Lang I/II
	Play Mode		D.Menu / Top
	L.Night		Sleep / Timer

