



















 

 






















 



 




























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Find	 Red / Netflix / Search
 Green / V-Format	 Picture / Format
 Green / V-Format	 Green / APP / Repeat
 Yellow / TXT	 Text / Goto
 Yellow / TXT	 Yellow / YouTube / Repeat
 Blue / Audio	 Audio / Lang I/II
 Blue / Audio	 Blue / Prime Video / Random
 Record	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 Shift	 Setup / OPT /
 << Fast	 << / Tune-
 Fast >>	 >> / Tune+
 < Slow	 I<< / Preset-
 Slow >	 >>I / Preset+

Originale	Sostituto
 Sleep	 Sleep / Timer
 Zoom	 Zoom / Size
 F1	 Shift + 1
 F2	 Shift + 2
 Menu	 Menu / Home
 Up / PR+	 Up
 Up / PR+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK / List	 OK
 OK / List	 Smart / List
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 EPG	 Guide / EPG / -/--
 Down / PR-	 Down
 Down / PR-	 CH- / Page-





Originale	Sostituto
 Info	 Info / Angle
 TV / AV	 AV / Input / RDS
 Fav	 Fav / Marker / PC
 Page+	 Shift + CH+ /
 Pause	 Pause / Step / Freeze
 SAT	 Shift + 0
 SAT	 Display / Media
 Page-	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 TV / Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return

