 








 
 
 

 
 
 


 
 

 

 

 

 

 

 






Originale	Sostituto
 Standby	 Power
 Open/Close	 Eject
 Input Select	 AV
 HDMI	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Setup	 Options
 Clear	 Exit
 Prog+	 Ch +

Originale	Sostituto
 Prog-	 Ch -
 Timer Prog	 Sleep
 Variable Replay	 Pre Ch
 Variable Skip	 Shift + Pre Ch
 Top Menu	 Menu
 Disc Menu	 D. Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Return	 Shift + Back
 Mode	 Yellow
 Search	 Blue
 <<	 <<
 Play	 Play





Originale		Sostituto	
	>>		>>
	l<<		l<<
	Stop		Stop
	>>		>>
	Pause		Pause
	VCR	 + 	Shift + 1
	HDD	 + 	Shift + 2
	DVD	 + 	Shift + 3
	Time Slip	 + 	Shift + Sleep
	Dubbing		Back
	Rec Mode	 + 	Shift + Rec
	Rec		Rec
	Subtitle		Subt
	1.3x/0.8x PPlay		Format
	O))/Audio		Dual
	Sat Link		3D

Originale		Sostituto	

