 








 
 
 

 
 
 


 
 

 

 

 

 

 

 






| Originale | Sostituto |
|--|---|
|  Standby |  Power |
|  Open/Close |  Eject |
|  Input Select |  AV |
|  HDMI |  TV/R |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Setup |  Options |
|  Clear |  Exit |
|  Prog+ |  Ch + |

| Originale | Sostituto |
|---|--|
|  Prog- |  Ch - |
|  Timer Prog |  Sleep |
|  Variable Replay |  Pre Ch |
|  Variable Skip |  Shift + Pre Ch |
|  Top Menu |  Menu |
|  Disc Menu |  D. Menu |
|  Up |  Up |
|  Left |  Left |
|  Enter |  Ok |
|  Right |  Right |
|  Down |  Down |
|  Display |  Info |
|  Return |  Shift + Back |
|  Mode |  Yellow |
|  Search |  Blue |
|  << |  << |
|  Play |  Play |





| | Originale | Sostituto |
|--|-----------------|----------------------|
| | >> | >> |
| | I<< | I<< |
| | Stop | Stop |
| | >>I | >>I |
| | Pause | Pause |
| | VCR | + 1 Shift + 1 |
| | HDD | + 2 Shift + 2 |
| | DVD | + 3 Shift + 3 |
| | Time Slip | + Shift + Sleep |
| | Dubbing | Back |
| | Rec Mode | + Shift + Rec |
| | Rec | Rec |
| | Subtitle | Subt |
| | 1.3x/0.8x PPlay | Format |
| | O))/Audio | Dual |
| | Sat Link | 3D |

| | Originale | Sostituto |
|--|-----------|-----------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

