











 






 







Originale	Sostituto	Originale	Sostituto
	Power		Power
	Picture		Format
	Input Tv		TV/R
	Input AV		AV
	Menu		Menu
	Text		Text
	STTL		Subt
	List/Provider		List
	i		Info
	Exit		Exit
	Netflix		Media
	Home		Smart
	Guide		Guide
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down

Originale	Sostituto	Originale	Sostituto
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originale		Sostituto		Originale	Sostituto
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	?/eHelp		Dual		
	Last View		Pre Ch		
	<<		<<		
	Play		Play		
	>>		>>		
	I<<		I<<		
	Pause		Pause		
	>>I		>>I		
	My APP		Shift + Media		
	Stop		Stop		
	Rec		Rec		

