

 






 


 


 
 

 




 

 






 
 
 

 


Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Volume+	 Vol +
Mute	 Mute	CH/Page+	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	App	 Media
TV	 TV/R	CH/Page-	 Ch -
Video	 D. Menu	1. ?	 1
Text	 Text	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit	Epg	 Guide
Menu Down	 Down	0/10	 0
Back	 Back	Red	 Red



Originale	Sostituto	Originale	Sostituto
Green	 B	Green	
Yellow	 C	Yellow	
Blue	 D	Blue	
Info	 SHIFT +  DISPLAY INFO	Shift + Info	
East	 SHIFT +  A	Shift + Red	

