 


 
 


 

 

 

 

 



 

 
 
 
 
 
 
 
 

 
 


 
 



 

 

 
 

 



 
 
 


 



 

 

 








Originale		Sostituto		Originale		Sostituto	
	On		Power		Vol-		Vol -
	Standby		Shift + Power		Return		Back
	Sleep		Sleep		Setup		Options
	< Input Selector		Shift + Left		Dimmer		9
	Input Selector >		Shift + Right		Muting		Mute
	SURR		3		I<<		I<<
	Stereo		1		Play		Play
	Direct		2		>>I		>>I
	A.ST		4		<<		<<
	Preset+		Ch +		Stop		Stop
	Preset-		Ch -		>>		>>
	Up		Up		Rec		Rec
	Left		Left		Pause / Play Rev.		Pause
	Enter		Ok		Open / Close		Eject
	Right		Right		Audio		Dual
	Down		Down		Display		Info
	Vol+		Vol +		SW Mode		Red



 


 























 
 




 

 


 
 




 
 
 



 


 
 
 

 
 



 







Originale		Sostituto	
TEST TONE 2	Test Tone	TOP MENU MENU	Menu
3	DSP ▶	8	8
LATE NIGHT 4	Late Night	DISC NAV LIST	List
DISTANCE 5	Distance	C	Yellow
6	◀ DSP	7	7
SP A 7	SP A	5	5
CH SEL 8	CH Sel	E-MANUAL D.MENU	D. Menu
9	Level Up	HOME SMART	Smart
SP B +10	SP B	6	6
T-D SETUP 0	T-D Setup	B	Green
UP/DOWN SEARCH	Level Down	APP MEDIA	Media

Originale		Sostituto	





Originale		Sostituto		Originale		Sostituto	
	ON		Power		>>I		>>I
	STDBY		Shift + Power		<<		<<
	Menu		Menu		Stop		Stop
	Disc+		Ch +		>>		>>
	Disc-		Ch -		Pause		Pause
	Up		Up		Open / Close		Eject
	Left		Left		Random		Text
	Enter		Ok		Subtitle		Subt
	Right		Right		Angle		Format
	Down		Down		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Return		Back		4		4
	Setup		Options		5		5
	Muting		Mute		6		6
	I<<		I<<		7		7
	Play		Play		8		8



