



 

 


 





 





 

 





 

 



 



 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Originale	Sostituto
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 FAV	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 EPG	 Guide
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green





Originale		Sostituto	
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec
	Stop		Stop
	I<<<		I<<<
	I>>>		I>>>
	Tv/Radio		TV/R
	Subpage		Eject
	Subtitle		Subt
	Reveal		3D
	Audio		Dual
	Size		Format
	Hold		Options

Originale		Sostituto	
	Index		List
	Home		Smart

