 
 

 

 

 

 

 

 

 
 
 
 


 
 




 





 

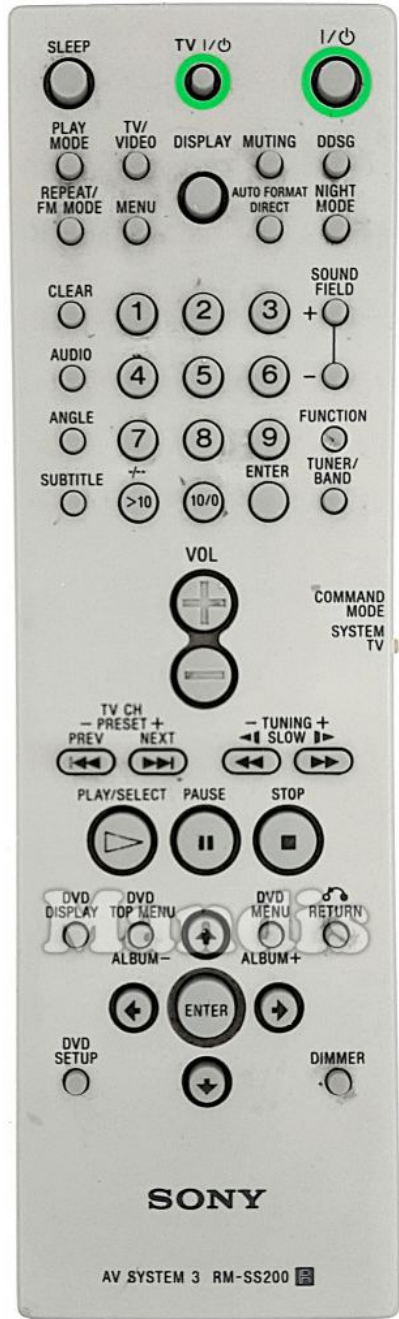 


Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Play Mode	 Shift + Play
 Tv/Video	 TV/R
 Repeat Mode	 Text
 Menu	 Smart
 Display	 Info
 Muting	 Mute
 Auto Format	 List
 Night Mode	 AV
 Clear	 Exit
 Audio	 Dual
 Angle	 Red
 Subtitle	 Subt
 1	 1
 2	 2
 3	 3

 
Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10/0	 0
 >10 / -/--	 Guide
 Enter	 Pre Ch
 Sound Field+	 Ch +
 Sound Field-	 Ch -
 Function	 Media
 Tuner Band	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 I<</Preset-	 I<<
 >>I/Preset+	 >>I





Originale	Sostituto	Originale	Sostituto
 <</>I Slow/Tune-		<<	
 Tuning+/Slow		>>	
 Play		Play	
 Pause		Pause	
 Stop		Stop	
 DVD Display		Shift + Info	
 DVD Top		Menu	
 DVD Menu /		D. Menu	
 Return		Back	
 Up		Up	
 Left		Left	
 Enter		Ok	
 Right		Right	
 Down		Down	
 DVD Setup		Options	
 Dimmer		Blue	



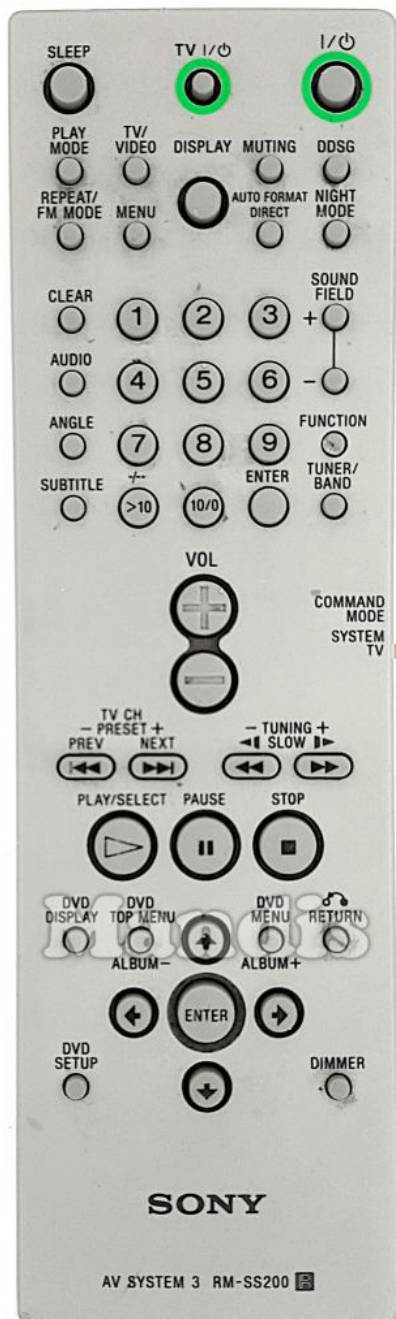

	Originale	Sostituto	Originale	Sostituto
	Power			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	-/--			
	TV Vol+			
	TV Vol-			
	TV CH+			
	TV CH-			
	Tv/Video			

