



Originale	Sostituto
 Power	 Power
 Eject / Open/Close	 Eject
 CD/DVD	 Shift + 1
 VCR	 Shift + 2
 FM/AM	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 Program	 Sleep

Originale	Sostituto
 Clear	 Exit
 Sound Mode	 Shift + Dual
 Audio	 Dual
 Show View	 Media
 RDS	 List
 Display / CLK/CNT	 Info
 Setup / i	 Options
 Setup / i	 Menu
 Up / PR/TRK + / Preset +	 Up
 Up / PR/TRK + / Preset +	 Ch +
 Left / Tuning -	 Left
 Right / Tuning +	 Right
 OK / Memory /	 Ok
 Down / PR/TRK - / Preset -	 Down
 Down / PR/TRK - / Preset -	 Ch -
 Return	 Back
 Disc Menu	 D. Menu





Originale	Sostituto	Originale	Sostituto
Power	Power	Display/CLK/CN	3D
Eject	Eject	i/Setup	Info
1	1	Up	Up
2	2	PR/TRK+	Ch +
3	3	PR/TRK-	Ch -
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	OK/Enter	Ok
8	8	Return	Back
9	9	Disc Menu	D. Menu
0	0	Rec/ITR	Rec
AV	AV	I<<	I<<
Program	Sleep	<<	<<
Clear	Exit	>>	>>
O))/Audio	Dual	>>I	>>I
ShowView	Media	Stop	Stop

Originale	Sostituto	Originale	Sostituto
Power	Power	Display/CLK/CN	3D
Eject	Eject	i/Setup	Info
1	1	Up	Up
2	2	PR/TRK+	Ch +
3	3	PR/TRK-	Ch -
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	OK/Enter	Ok
8	8	Return	Back
9	9	Disc Menu	D. Menu
0	0	Rec/ITR	Rec
AV	AV	I<<	I<<
Program	Sleep	<<	<<
Clear	Exit	>>	>>
O))/Audio	Dual	>>I	>>I
ShowView	Media	Stop	Stop



