



Originale	Sostituto
A-B	A-B
MUTE	MUTE
DVD/DVB	D. Menu
SOURCE	Mute
1	Smart
2	AV
3	AV
4	1
5	2
6	3
7	4
8	5
9	6
0	7
10+	8
DISPLAY	9
SUBTITLE	0
	10+
	GUIDE
	INFO
	AD SUBT

Originale	Sostituto
ANGLE	ANGLE
AUDIO	AUDIO
MENU	MENU
TITLE / TV/RADIO	TITLE / TV/RADIO
RETURN	RETURN
SEARCH	SEARCH
SLOW	Slow
UP	UP
LEFT	LEFT
ENTER	ENTER
RIGHT	RIGHT
DOWN	DOWN
SETUP	SETUP
VOL-	VOL-
VOL+	VOL+
PLAY	PLAY
PAUSE	PAUSE
	Format
	Dual
	Menu
	Shift + TV/R
	Back
	TV/R
	List
	Up
	Left
	Ok
	Right
	Down
	Options
	Vol -
	Vol +
	Play
	Pause





Originale	Sostituto
STOP	Stop
RED	Red
SKIP PREV.	I<<
SKIP PREV.	Ch -
GREEN	Green
SKIP NEXT	>>I
SKIP NEXT	Ch +
REW	<<
YELLOW	Yellow
FWD	>>
BLUE	Blue
PROGRAM / TTX	Text
REPEAT	Shift + Text

Originale	Sostituto

