


 
 
 
 







 



 



 




 





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 Swap / -/-	 Back
 Swap / -/-	 Shift + Guide
 Text	 Text
 EPG / Info	 Guide
 EPG / Info	 Info

Originale	Sostituto
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Exit	 Exit
 List	 List
 OPT	 Options
 PVR	 Smart
 Radio	 Shift + TV/R
 TV	 TV/R





Originale		Sostituto		Originale	Sostituto
	Red / << FR		Red		
	Red / << FR		<<		
	Yellow / Play		Yellow		
	Yellow / Play		Play		
	Blue / FF >>		Blue		
	Blue / FF >>		>>		
	Record		Rec		
	Green / Stop /		Green		
	Green / Stop /		Stop		
	Pause		Pause		
	Rec Pause / Timeshift		3D		
	Files		Media		
	Timer		Sleep		
	Skip R		I<<		
	Fav		Pre Ch		
	Skip F		>>I		

