 






 











 


 



 
 
 
 
 
 
 
 




Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 Recall/+10	 Pre Ch
 Rec List	 List
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Dual

Originale	Sostituto
 Display	 Info
 Tv/Radio	 TV/R
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 FAV	 Shift + Pre Ch
 Rec	 Rec
 Media	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Source	 AV





Originale	Sostituto
PMode	Shift + Format
SMode	Shift + Dual
Sleep	Sleep
DVD Menu/Text	Text
A-B/Hold	3D
Goto/Reveal	Options
Play	Play
DVD	D. Menu
Pause/Timeshift	Pause
Stop	Stop
Open/Close/Index	Eject
Size	Format
<<	<<
>>	>>
I<<	I<<
>>I	>>I
Red	Red

Originale	Sostituto
Green/Angle	Green
Yellow/Repeat	Yellow
Blue/Title	Blue

