



Originale	Sostituto
Power	Power
Sleep	Sleep
CBL/SAT	1
DVD	2
Blu-ray	3
Game	4
AUX	5
Media Player	6
Tv Audio	7
BK	8
Tuner	9
USB	Guide
Play	Play
CD	0
Bluetooth	Pre Ch
Phono	Dual
	Smart

Originale	Sostituto
Internet Radio	Media
Eco	3D
CH/Page+	Ch +
CH/Page-	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Info	Info
Option	Options
Back	Back
Setup	Menu
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
>>I/Tune+	>>I






 








 







 


 

 


 






Originale		Sostituto		Originale	Sostituto
	I<</Tune-		I<<		
	Pause		Pause		
	Quick Select 1		D. Menu		
	Quick Select 2		Text		
	Quick Select 3		Eject		
	Quick Select 4		AV		
	Green/Movie		Green		
	Red/Music		Red		
	Blue/Game		Blue		
	Yellow/Pure		Yellow		



 

 



Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 Media Player	 6
 Tv Audio	 7
 BK	 8
 Tuner	 9
 USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Phono	 Dual
 Internet Radio	 Smart
	 Media

Originale	Sostituto
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play	 Play
 >>I/Tune+	 >>I
 I<</Tune-	 I<<
 Pause	 Pause
 Quick Select 1	 D. Menu
 Quick Select 2	 Text





Originale		Sostituto		Originale		Sostituto	
	Quick Select 3		Eject				
	Quick Select 4		AV				

