








 






 











Originale	Sostituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Subtl	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 -ISI-	 Shift + Dual

Originale	Sostituto
 -IPI-	 Shift + Format
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Select	 Ok
 DTV Menu	 D. Menu
 Call	 Pre Ch
 ATV Menu	 Menu
 Sleep	 Sleep
 Exit	 Exit
 I/II	 Dual
 QV	 3D
 EPG	 Guide
 Page+	 >>





Originale	Sostituto	Originale	Sostituto
 Page-	 <<		
 Info	 Info		
 Text	 Text		
 Mix	 TV/R		
 [II]/Size	 Format		
 Index	 List		
 Hold	 Media		
 Reveal	 Options		
 Cancel	 Back		
 Subpage	 Eject		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

