





 
 
 

 

Originale	Sostituto
On	Power
Off	+ Shift + Power
Mute	Mute
AVR	+ Shift + 1
DVD	+ Shift + 2
CD	+ Shift + 3
Tape	+ Shift + 4
VID1/VCR	+ Shift + 5
VID2/TV	+ Shift + 6
VID3/CBL/SAT	+ Shift + 7
DIM	+ Shift + 8
AM/FM	+ Shift + 9
6 CH	+ Shift + Guide
Sleep	Sleep
Test	Smart
Input	AV
Vol+	Vol +

Originale	Sostituto
Surr.	Dual
Night	Exit
[≡]	Text
Vol-	Vol -
CH./[≡?]	TV/R
Up	Up
SPKR/Menu	Menu
Left	Left
Set	Ok
Right	Right
Digital/[≡X]	Media
Down	Down
Delay/Normal	Info
1	1
2	2
3	3
4	4





 
 


 
 

 

 
 
 
 









 
 
 

 

 

 


 

 



 

 










 


 



 
 
 

 

 
 
Originale	Sostituto
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[≡+]	 Guide
 9	 9
 0	 0
 Mem/[≡◆]	 Pre Ch
 Tuning ▲ / Red	 Ch +
 Tuning ▲ / Red	 Red
 Direct/Green	 Green
 Clear/Yellow	 Yellow
 Preset ▲ / Blue	 Shift + Ch +
 Preset ▲ / Blue	 Blue
 Tuning ▼	 Ch -
 RDS/D.Skip	 Options
 Preset ▼	 Shift + Ch -

Originale	Sostituto
 Dolby	 Shift + Red
 DTS Surr.	 Shift + Green
 DTS Neo 6	 Shift + Yellow
 Logic 7	 Shift + Pre Ch
 Stereo	 Shift + Blue
 Skip Dwn DVD	 I<<
 Skip Up DVD	 >>I
 << DVD	 <<
 Play DVD	 Play
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause






 





 


Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Vol+	 Vol +
 Night	 Exit
 [=]	 Text
 Vol-	 Vol -
 CH./[=?]	 TV/R
 Up	 Up
 SPKR/Menu	 Menu
 Left	 Left
 Set	 Ok
 Right	 Right
 Digital/[=X]	 Media
 Down	 Down
 Delay/Normal	 Info
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[=+]	 Guide
 9	 9
 0	 0
 Mem/[=◇]	 Pre Ch
 Direct	 Smart
 Clear	 Shift + Exit
 Preset ▲	 Ch +
 RDS/D.Skip	 Options
 Preset ▼	 Ch -
 I<<	 I<<
 >>I	 >>I





	Originale		Sostituto	
	<<		<<	
	Play		Play	
	>>		>>	
	Stop		Stop	
	Pause		Pause	

	Originale		Sostituto	






 



 




Originale	Sostituto
Power On	Power
Power Off	Shift + Power
SPKR/Menu	Menu
Delay/Normal	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
Tun-M/[≡+]	Guide
9	9
0	0
Mem/[≡◆]	Pre Ch
Direct	Smart

Originale	Sostituto
Preset ▲/Blue	Ch +
RDS/D.Skip	Options
I<<	I<<
>>I	>>I
A<<	A<<
Play	Play
>>	>>
Stop	Stop
Pause	Pause





	Originale	Sostituto	Originale	Sostituto
	<<			<<
	<>			Play
	>>			>>
	Rec			Rec
	Stop			Stop

