







 

 
 
 
 


 
 


 
 
 
 

 
 
 

 


Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Red	 Red
 Blue/Pause	 Blue
 Green	 Green
 Yellow	 Yellow
 Audio	 Dual
 Zoom	 Eject
 Info	 Info
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Stop	 Stop
 Rec	 Rec
 Pause	 Pause

Originale	Sostituto
 Recall	 Back
 Text	 Text
 Subtitle	 Subt
 USB	 AV
 Menu	 Menu
 Exit	 Exit
 EPG	 Guide
 FAV	 Pre Ch
 Up/P+	 Up
 Down/P-	 Down
 Right/Vol+	 Right
 Left/Vol-	 Left
 OK	 Ok
 Find	 Options
 SAT	 Format
 HDMI	 Smart
 F1	 Media





Originale	Sostituto
 Page+	 Ch +
 Page-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 TV/Radio	 TV/R

Originale	Sostituto

