



 

 

 

 

 

 

 



 

 

 

 

 

 

 





Originale	Sostituto
 Power	 Power
 Function / TV Source	 AV / Input / RDS
 Open / Close	 Eject / Surround
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 V-Sound	 Shift + Sound / Title
 0	 0
 DSP/EQ	 Subtitle / EQ
 I<<	 I<< / Preset-

Originale	Sostituto
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Tuning/CH+	 CH+ / Page+
 Tuning/CH+	 Shift + >> /
 Vol-	 Vol-
 Repeat	 Shift + Green / APP /
 Tuning/CH-	 CH- / Page-
 Tuning/CH-	 Shift + << /
 Disc Menu	 D.Menu / Top
 Menu	 Menu / Home
 Title Menu	 Sound / Title



