 









 




 
 

 
 





 
 

 







 
 


 

 



 





 
 
 
 

 

 












Originale		Sostituto		Originale		Sostituto	
	Power		Power		Home		Smart
	Volume+		Vol +		Stop		Stop
	Volume-		Vol -		Pause		Pause
	Mute		Mute		Play		Play
	Sleep		Sleep		I<</Tune-		I<<
	Eco		3D		>>/Tune+		>>I
	CH/Page+		Ch +		<<		<<
	CH/Page-		Ch -		>>		>>
	Info		Info		Smart Select 1		D. Menu
	Option		Options		Smart Select 2		Text
	Back		Back		Smart Select 3		Eject
	Setup		Menu		Smart Select 4		AV
	Up		Up		Green/Movie		Green
	Down		Down		Red/Music		Red
	Right		Right		Blue/Game		Blue
	Left		Left		Yellow/Pure		Yellow
	Enter		Ok		1		1






Originale	Sostituto
 Power	 Power
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Sleep	 Sleep
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Home	 Smart
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Originale	Sostituto
 >>	 >>
 <<	 <<
 >> Tune+	 >>
 <</Tune-	 <<
 Smart Select 1	 D. Menu
 Smart Select 2	 Text
 Smart Select 3	 Eject
 Smart Select 4	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Originale		Sostituto		Originale		Sostituto	
	Power		Power		>>		>>
	Volume+		Vol +		<<		<<
	Volume-		Vol -		>> /Tune+		>>
	Mute		Mute		<</Tune-		<<
	Sleep		Sleep		1		1
	CH/Page+		Ch +		Smart Select 1		D. Menu
	CH/Page-		Ch -		Smart Select 2		Text
	Back		Back		Smart Select 3		Eject
	Up		Up		Smart Select 4		AV
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Enter		Ok		5		5
	Home		Smart		6		6
	Stop		Stop		7		7
	Pause		Pause		8		8
	Play		Play		9		9



