 








 
 
 

 



 
 



















| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Sleep |  Sleep |
|  CBL/SAT |  1 |
|  Media Player |  2 |
|  Blu-ray |  3 |
|  Game |  4 |
|  AUX1 |  5 |
|  AUX2 |  6 |
|  Phono |  7 |
|  TV Audio |  8 |
|  Tuner |  9 |
|  USB |  Guide |
|  Bluetooth |  0 |
|  Internet Radio |  Pre Ch |
|  Micro |  Smart |
|  CH/Page Up |  Ch + |
|  CH/Page Down |  Ch - |

| Originale | Sostituto |
|---|---|
|  Eco |  3D |
|  Volume Up |  Vol + |
|  Volume Down |  Vol - |
|  Mute |  Mute |
|  Info |  Info |
|  Option |  Options |
|  Back |  Back |
|  Setup |  Menu |
|  Play |  Play |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  I<</Tune- |  I<< |
|  Pause |  Pause |
|  >>I/Tune+ |  >>I |

 

 
 




 

 

 








 

 





| Originale | Sostituto | Originale | Sostituto |
|----------------|-----------|-----------|-----------|
| Quick Select 1 | D. Menu | | |
| Quick Select 2 | Text | | |
| Quick Select 4 | AV | | |
| Quick Select 3 | Eject | | |
| Green/Movie | Red | | |
| Red/Music | Green | | |
| Blue/Game | Blue | | |
| Yellow/Pure | Yellow | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|----------------|---|--------|---|----------------|---|---------|
|  | Power |  | Power |  | Volume Up |  | Vol + |
|  | Sleep |  | Sleep |  | Volume Down |  | Vol - |
|  | CBL/SAT |  | 1 |  | Mute |  | Mute |
|  | Media Player |  | 2 |  | Up |  | Up |
|  | Blu-ray |  | 3 |  | Down |  | Down |
|  | Game |  | 4 |  | Right |  | Right |
|  | AUX1 |  | 5 |  | Left |  | Left |
|  | AUX2 |  | 6 |  | Enter |  | Ok |
|  | Phono |  | 7 |  | Back |  | Back |
|  | TV Audio |  | 8 |  | I<</Tune- |  | I<< |
|  | Tuner |  | 9 |  | Play |  | Play |
|  | USB |  | Guide |  | Pause |  | Pause |
|  | Bluetooth |  | 0 |  | >>I/Tune+ |  | >>I |
|  | Internet Radio |  | Pre Ch |  | Quick Select 1 |  | D. Menu |
|  | Micro |  | Smart |  | Quick Select 2 |  | Text |
|  | CH/Page Up |  | Ch + |  | Quick Select 3 |  | Eject |
|  | CH/Page Down |  | Ch - |  | Quick Select 4 |  | AV |

