

 

 

 



 



 



 



 

 

 

 

 

 


 
 

 


 
 



 
 
 

 

 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Pl ay/ Pause		Pause / Step / Freeze
	Sl eep		Sl eep / Ti mer		Pl ay/ Pause		Down
	Mut e		Mut e / Di mmer		Fol der/Pres et Up		CH+ / Page+
	F/ Funct i on		Menu / Home		Pr ogr am/ Mem o		TV/ Radi o /
	I / I nput		AV / I nput / RDS		Vol +		Vol +
	EQ		Subt it le / EQ		Fol der/Pres et		CH- / Page-
	Mbde		Sm art / Li st		I nf o		I nf o / Angl e
	Mbde		Up		Vol -		Vol -
	I <</ CH/ Tun-		Lef t		RDS/ Dab Mbde		Red / Netf lix / Search
	I <</ CH/ Tun-		<< / Tune-		PTY/ Scan Sort		Green / APP / Repeat
	I <</ CH/ Tun-		I << / Pres et -		Rec		Rec / Rec Mbde
	Ent er/ st op		OK				
	Ent er/ st op		St op / Hol d				
	>> / CH/ Tun+		Ri ght				
	>> / CH/ Tun+		>> / Pres et +				
	>> / CH/ Tun+		>> / Tune+				
	Pl ay/ Pause		Pl ay / Sl ow				

