









Originale		Sostituto		Originale		Sostituto	
	Power Receiver		Power		Stereo		Audio / Lang I/II
	DVD		2		Input Sel		AV / Input / RDS
	TV		1		Signal Select		Sound / Title
	VCR		4		Midnight /		Sleep / Timer
	CD-R		3		Mute		Mute / Dimmer
	TUN		6		Up/Tune+		Up
	Test Tone		Display / Media		Up/Tune+		Shift + >> /
	Input ATT		TV/Radio /		Left/ST-		Left
	FL Dimmer		Shift + Mute / Dimmer		Left/ST-		Shift + I<< / Preset-
	CH Select		Smart / List		Enter		OK
	CH Level-		CH- / Page-		Right/ST+		Right
	CH Level+		CH+ / Page+		Right/ST+		Shift + >>I / Preset+
	Effect-		<< / Tune-		Down/Tune-		Down
	Effect+		>> / Tune+		Down/Tune-		Shift + << /
	Remote Setup		Setup / OPT /		Master		Vol+
	Standard		Subtitle / EQ		Master Volume-		Vol-
	Adv.Surr.		Eject / Surround		TV Vol+		Shift + Vol+





Originale	Sostituto
 Tv Vol-	 Shift + Vol-
 TV Input	 Shift + AV / Input / RDS
 TV Power	 Shift + Power

Originale	Sostituto
































 


 


 

 




 

 









Originale	Sostituto	Originale	Sostituto
Power DVD	Power	Channel+ DVD	CH+ / Page+
1 DVD	1	Channel- DVD	CH- / Page-
2 DVD	2	Up DVD	Up
3 DVD	3	Down DVD	Down
4 DVD	4	Right DVD	Right
5 DVD	5	Left DVD	Left
6 DVD	6	Enter DVD	OK
7 DVD	7	Pause DVD	Pause / Step / Freeze
8 DVD	8	Rec DVD	Rec / Rec Mode
9 DVD	9	Play DVD	Play / Slow
0 DVD	0	<< DVD	<< / Tune-
+10 DVD	Guide / EPG / -/--	>> DVD	>> / Tune+
Menu DVD	Menu / Home	>>I DVD	>>I / Preset+
Top Menu DVD	D.Menu / Top	Stop DVD	Stop / Hold
Master	Vol+	I<< DVD	I<< / Preset-
Master volume-	Vol-	Audio DVD	Audio / Lang I/II
Mute	Mute / Dimmer	Sub Title DVD	Subtitle / EQ

Originale	Sostituto	Originale	Sostituto
Power DVD	Power	Channel+ DVD	CH+ / Page+
1 DVD	1	Channel- DVD	CH- / Page-
2 DVD	2	Up DVD	Up
3 DVD	3	Down DVD	Down
4 DVD	4	Right DVD	Right
5 DVD	5	Left DVD	Left
6 DVD	6	Enter DVD	OK
7 DVD	7	Pause DVD	Pause / Step / Freeze
8 DVD	8	Rec DVD	Rec / Rec Mode
9 DVD	9	Play DVD	Play / Slow
0 DVD	0	<< DVD	<< / Tune-
+10 DVD	Guide / EPG / -/--	>> DVD	>> / Tune+
Menu DVD	Menu / Home	>>I DVD	>>I / Preset+
Top Menu DVD	D.Menu / Top	Stop DVD	Stop / Hold
Master	Vol+	I<< DVD	I<< / Preset-
Master volume-	Vol-	Audio DVD	Audio / Lang I/II
Mute	Mute / Dimmer	Sub Title DVD	Subtitle / EQ





Originale		Sostituto		Originale		Sostituto	
	Angle DVD		Info / Angle		Right VCR		Shift + Right
	Power VCR		Shift + Power		Left VCR		Shift + Left
	1 VCR		Shift + 1		Enter VCR		Shift + OK
	2 VCR		Shift + 2		Pause VCR		Shift + Pause / Step /
	3 VCR		Shift + 3		Play VCR		Shift + Play /
	4 VCR		Shift + 4		Stop VCR		Shift + Stop /
	5 VCR		Shift + 5		<< VCR		Shift + << /
	6 VCR		Shift + 6		>>I VCR		Shift + >>I / Preset+
	7 VCR		Shift + 7		>> VCR		Shift + >> /
	8 VCR		Shift + 8		I<< VCR		Shift + I<< / Preset-
	9 VCR		Shift + 9		Rec VCR		Shift + Rec / Rec Mode
	0 VCR		Shift + 0				
	Disc VCR		Shift + Back / Return				
	Channel+ VCR		Shift + CH+ /				
	Channel- VCR		Shift + CH- /				
	Up VCR		Shift + Up				
	Down VCR		Shift + Down				





Originale	Sostituto
Power CD	Power
1 CD	1
2 CD	2
3 CD	3
4 CD	4
5 CD	5
6 CD	6
7 CD	7
8 CD	8
9 CD	9
0 CD	0
+10 CD	Guide / EPG / -/--
Disc CD	Back / Return
Master	Vol+
Master Volume-	Vol-
Mute	Mute / Dimmer
Channel+ CD	CH+ / Page+

Originale	Sostituto
Channel- CD	CH- / Page-
Up CD	Up
Down CD	Down
Right CD	Right
Left CD	Left
Enter CD	OK
Pause CD	Pause / Step / Freeze
Play CD	Play / Slow
<< CD	<< / Tune-
>> CD	>> / Tune+
>> CD	>> / Preset+
I<< CD	I<< / Preset-
Stop CD	Stop / Hold
Power TVC	Shift + Power
1 TVC	Shift + 1
2 TVC	Shift + 2
3 TVC	Shift + 3







 







 











 






 






















 
 



 


 







Originale	Sostituto	Originale	Sostituto
4 TVC	+ 4 Shift + 4	Play TVC	+ Shift + Play /
5 TVC	+ 5 Shift + 5	Stop TVC	+ Shift + Stop /
6 TVC	+ 6 Shift + 6	<< TVC	+ Shift + << /
7 TVC	+ 7 Shift + 7	>>I TVC	+ Shift + >>I / Preset+
8 TVC	+ 8 Shift + 8	>> TVC	+ Shift + >> /
9 TVC	+ 9 Shift + 9	I<< TVC	+ Shift + I<< / Preset-
0 TVC	+ 0 Shift + 0		
+10 TVC	+ Shift + Guide / EPG / -/-		
Disc TVC	+ Shift + Back / Return		
Menu TVC	+ Shift + Menu /		
Up TVC	+ Shift + Up		
Down TVC	+ Shift + Down		
Right TVC	+ Shift + Right		
Left TVC	+ Shift + Left		
Enter TVC	+ Shift + OK		
Pause TVC	+ Shift + Pause / Step /		
Rec TVC	+ Shift + Rec / Rec Mode		

Originale	Sostituto	Originale	Sostituto
Play TVC	+ Shift + Play /	Stop TVC	+ Shift + Stop /
<< TVC	+ Shift + << /	>>I TVC	+ Shift + >>I / Preset+
>> TVC	+ Shift + >> /	I<< TVC	+ Shift + I<< / Preset-





Originale		Sostituto		Originale		Sostituto	
	Power TUN		Power		Left TUN		Left
	1 TUN		1		D.Access TUN		Play / Slow
	2 TUN		2		Band TUN		Smart / List
	3 TUN		3		T.Edit		Pause / Step / Freeze
	4 TUN		4		Class TUN		<< / Tune-
	5 TUN		5		RF ATT TUN		>> / Tune+
	6 TUN		6		MPX TUN		Stop / Hold
	7 TUN		7		Display TUN		Display / Media
	8 TUN		8		Power CDR		Shift + Power
	9 TUN		9		1 CDR		Shift + 1
	0 TUN		0		2 CDR		Shift + 2
	Master		Vol+		3 CDR		Shift + 3
	Master volume-		Vol-		4 CDR		Shift + 4
	Mute		Mute / Dimmer		5 CDR		Shift + 5
	Up TUN		Up		6 CDR		Shift + 6
	Down TUN		Down		7 CDR		Shift + 7
	Right TUN		Right		8 CDR		Shift + 8





Originale	Sostituto
9 CDR	+ Shift + 9
0 CDR	+ Shift + 0
+10 CDR	+ Shift + Guide / EPG / -/-
Channel+ CDR	+ Shift + CH+ /
Channel- CDR	+ Shift + CH- /
Up CDR	+ Shift + Up
Down CDR	+ Shift + Down
Right CDR	+ Shift + Right
Left CDR	+ Shift + Left
Enter CDR	+ Shift + OK
Pause CDR	+ Shift + Pause / Step /
Play CDR	+ Shift + Play /
Stop CDR	+ Shift + Stop /
<< CDR	+ Shift + << /
Rec CDR	+ Shift + Rec / Rec Mode
I<< CDR	+ Shift + I<< / Preset-
>> CDR	+ Shift + >> /

Tune+

Originale	Sostituto
>>I CDR	+ Shift + >>I / Preset+

