



Originale		Sostituto		Originale		Sostituto	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Originale	Sostituto
5 Tv	+ Shift + 5
6 Tv	+ Shift + 6
7 Tv	+ Shift + 7
9 Tv	+ Shift + 9
8 Tv	+ Shift + 8
0 Tv	+ Shift + 0
+10 Tv	+ Shift + Guide / EPG / -/-
Menu Tv	+ Shift + Menu /
Tv Input	+ Shift + AV / Input / RDS
Tv Vol+	+ Shift + Vol+
Tv Vol-	+ Shift + Vol-
Channel + Tv	+ Shift + CH+ /
Channel - Tv	+ Shift + CH- /
Up Tv	+ Shift + Up
Down Tv	+ Shift + Down
Enter Tv	+ Shift + OK
Right Tv	+ Shift + Right

Originale	Sostituto
Left Tv	+ Shift + Left
Pause/T.Edit Tv	+ Shift + Pause / Step /
Play/D.Access Tv	+ Shift + Play /
Stop/MPX Tv	+ Shift + Stop /
>>I/RF ATT Tv	+ Shift + >>I / Preset+
I<</Display Tv	+ Shift + I<< / Preset-
>>/Class Tv	+ Shift + >> /
<</Band Tv	+ Shift + << /
Rec Tv	+ Shift + Rec / Rec Mode
Disc Tv	+ Shift + Fav / Marker / PC





Originale	Sostituto
Power DVD	Power
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Top Menu	D.Menu / Top
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Disc DVD	Fav / Marker / PC

Originale	Sostituto
Menu DVD	Menu / Home
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold

 
 

 
 
 

 
 
 
 



 
 


 









Originale		Sostituto		Originale		Sostituto	
	>>I DVD		>>I / Preset+		Down VCR		Shift + Down
	I<< DVD		I<< / Preset-		Right VCR		Shift + Right
	Power VCR		Shift + Power		Left VCR		Shift + Left
	1 VCR		Shift + 1		Enter VCR		Shift + OK
	2 VCR		Shift + 2		Pause VCR		Shift + Pause / Step /
	3 VCR		Shift + 3		Play VCR		Shift + Play /
	4 VCR		Shift + 4		Stop VCR		Shift + Stop /
	5 VCR		Shift + 5		<< VCR		Shift + << /
	6 VCR		Shift + 6		>>I VCR		Shift + >>I / Preset+
	7 VCR		Shift + 7		>> VCR		Shift + >> /
	8 VCR		Shift + 8		I<< VCR		Shift + I<< / Preset-
	9 VCR		Shift + 9		Rec VCR		Shift + Rec / Rec Mode
	0 VCR		Shift + 0				
	Disc VCR		Shift + Fav / Marker / PC				
	Channel+ VCR		Shift + CH+ /				
	Channel- VCR		Shift + CH- /				
	Up VCR		Shift + Up				




 





 

 
 


 



 

 

 


















 


 


 

Originale	Sostituto
 Power CD	 Power
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0
 +10 CD	 Guide / EPG / -/--
 Disc CD	 Fav / Marker / PC
 Master	 Vol+
 Master Volume-	 Vol-
 Mute	 Mute / Dimmer
 Channel+ CD	 CH+ / Page+

Originale	Sostituto
 Channel- CD	 CH- / Page-
 Up CD	 Up
 Down CD	 Down
 Right CD	 Right
 Left CD	 Left
 Enter CD	 OK
 Pause CD	 Pause / Step / Freeze
 Play CD	 Play / Slow
 << CD	 << / Tune-
 >> CD	 >> / Tune+
 Stop CD	 Stop / Hold
 I<< CD	 I<< / Preset-
 >>I CD	 >>I / Preset+
 Power TVC	 Shift + Power
 1 TVC	 Shift + 1
 2 TVC	 Shift + 2
 3 TVC	 Shift + 3





 







 



 

 







 















 








 
 

 

 

 
 

 

 


 





Originale	Sostituto
 4 TVC	 +  Shift + 4
 5 TVC	 +  Shift + 5
 6 TVC	 +  Shift + 6
 7 TVC	 +  Shift + 7
 8 TVC	 +  Shift + 8
 9 TVC	 +  Shift + 9
 0 TVC	 +  Shift + 0
 +10 TVC	 +  Shift + Guide / EPG / -/-
 Disc TVC	 +  Shift + Fav / Marker / PC
 Menu TVC	 +  Shift + Menu /
 Up TVC	 +  Shift + Up
 Down TVC	 +  Shift + Down
 Right TVC	 +  Shift + Right
 Left TVC	 +  Shift + Left
 Enter TVC	 +  Shift + OK
 Pause TVC	 +  Shift + Pause / Step /
 Rec TVC	 +  Shift + Rec / Rec Mode

Originale	Sostituto
 Play TVC	 +  Shift + Play /
 Stop TVC	 +  Shift + Stop /
 << TVC	 +  Shift + << /
 >> TVC	 +  Shift + >> /
 >>I TVC	 +  Shift + >>I / Preset+
 I<< TVC	 +  Shift + I<< / Preset-





Originale	Sostituto
 Power TUN	 Power
 1 TUN	 1
 2 TUN	 2
 3 TUN	 3
 4 TUN	 4
 5 TUN	 5
 6 TUN	 6
 7 TUN	 7
 8 TUN	 8
 9 TUN	 9
 0 TUN	 0
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer
 TUNE+ TUN	 >> / Tune+
 TUNE- TUN	 << / Tune-
 ST+ TUN	 >>I / Preset+

Originale	Sostituto
 ST- TUN	 I<< / Preset-
 D.Access TUN	 Play / Slow
 Band TUN	 Pause / Step / Freeze
 Class TUN	 Stop / Hold
 MPX TUN	 Rec / Rec Mode
 Display TUN	 Display / Media
 RF ATT TUN	 Smart / List
 Power CDR	 Shift + Power
 1 CDR	 Shift + 1
 2 CDR	 Shift + 2
 3 CDR	 Shift + 3
 4 CDR	 Shift + 4
 5 CDR	 Shift + 5
 6 CDR	 Shift + 6
 7 CDR	 Shift + 7
 8 CDR	 Shift + 8
 9 CDR	 Shift + 9





Originale		Sostituto	
	0 CDR		Shift + 0
	+10 CDR		Shift + Guide / EPG / -/-
	Channel+ CDR		Shift + CH+ /
	Channel- CDR		Shift + CH- /
	Up CDR		Shift + Up
	Down CDR		Shift + Down
	Right CDR		Shift + Right
	Left CDR		Shift + Left
	Enter CDR		Shift + OK
	Pause CDR		Shift + Pause / Step /
	Play CDR		Shift + Play /
	Stop CDR		Shift + Stop /
<< CDR icon"/>	<< CDR		Shift + << /
	Rec CDR		Shift + Rec / Rec Mode
>> CDR icon"/>	>> CDR		Shift + >> /
	I<< CDR		Shift + I<< / Preset-
>>I CDR icon"/>	>>I CDR		Shift + >>I / Preset+

Originale	Sostituto

