



| Originale |                | Sostituto |                   | Originale |               | Sostituto |               |
|-----------|----------------|-----------|-------------------|-----------|---------------|-----------|---------------|
|           | Power Receiver |           | Power             |           | Loudness      |           | Subtitle / EQ |
|           | Input Sel      |           | AV / Input / RDS  |           | Test Tone     |           | Text / Goto   |
|           | Standard       |           | Sound / Title     |           | Left/ST-      |           | Left          |
|           | Stereo         |           | Audio / Lang I/II |           | Right/ST+     |           | Right         |
|           | ADV Surr.      |           | Eject / Surround  |           | CH Select     |           | Smart / List  |
|           | Master         |           | Vol+              |           | Midnight      |           | Sleep / Timer |
|           | Master Volume- |           | Vol-              |           | ATT           |           | D.Menu / Top  |
|           | Enter          |           | OK                |           | Signal Select |           | Menu / Home   |
|           | Remote Setup   |           | Setup / OPT /     |           | CH Level+     |           | CH+ / Page+   |
|           | Effect-        |           | I<< / Preset-     |           | CH Level-     |           | CH- / Page-   |
|           | Effect+        |           | >>I / Preset+     |           | TV            |           | 1             |
|           | Mute           |           | Mute / Dimmer     |           | CD-R          |           | 3             |
|           | DVD            |           | 2                 |           | Power TV      |           | Shift + Power |
|           | VCR            |           | 4                 |           | 1 Tv          |           | Shift + 1     |
|           | TUN            |           | 6                 |           | 2 Tv          |           | Shift + 2     |
|           | Up/Tune+       |           | Up                |           | 3 Tv          |           | Shift + 3     |
|           | Down/Tune-     |           | Down              |           | 4 Tv          |           | Shift + 4     |





| Originale    | Sostituto                    |
|--------------|------------------------------|
| 5 Tv         | +  Shift + 5                 |
| 6 Tv         | +  Shift + 6                 |
| 7 Tv         | +  Shift + 7                 |
| 9 Tv         | +  Shift + 9                 |
| 8 Tv         | +  Shift + 8                 |
| 0 Tv         | +  Shift + 0                 |
| +10 Tv       | +  Shift + Guide / EPG / -/- |
| Menu Tv      | +  Shift + Menu /            |
| Tv Input     | +  Shift + AV / Input / RDS  |
| Tv Vol+      | +  Shift + Vol+              |
| Tv Vol-      | +  Shift + Vol-              |
| Channel + Tv | +  Shift + CH+ /             |
| Channel - Tv | +  Shift + CH- /             |
| Up Tv        | +  Shift + Up                |
| Down Tv      | +  Shift + Down              |
| Enter Tv     | +  Shift + OK                |
| Right Tv     | +  Shift + Right             |

| Originale        | Sostituto                    |
|------------------|------------------------------|
| Left Tv          | +  Shift + Left              |
| Pause/T.Edit Tv  | +  Shift + Pause / Step /    |
| Play/D.Access Tv | +  Shift + Play /            |
| Stop/MPX Tv      | +  Shift + Stop /            |
| >>I/RF ATT Tv    | +  Shift + >>I / Preset+     |
| I<</Display Tv   | +  Shift + I<< / Preset-     |
| >>/Class Tv      | +  Shift + >> /              |
| <</Band Tv       | +  Shift + << /              |
| Rec Tv           | +  Shift + Rec / Rec Mode    |
| Disc Tv          | +  Shift + Fav / Marker / PC |







| Originale | Sostituto          |
|-----------|--------------------|
| Power DVD | Power              |
| Angle     | Info / Angle       |
| Subtitle  | Subtitle / EQ      |
| Audio     | Audio / Lang I/II  |
| Top Menu  | D.Menu / Top       |
| 1 DVD     | 1                  |
| 2 DVD     | 2                  |
| 3 DVD     | 3                  |
| 4 DVD     | 4                  |
| 5 DVD     | 5                  |
| 6 DVD     | 6                  |
| 7 DVD     | 7                  |
| 8 DVD     | 8                  |
| 9 DVD     | 9                  |
| 0 DVD     | 0                  |
| +10 DVD   | Guide / EPG / -/-- |
| Disc DVD  | Fav / Marker / PC  |

| Originale      | Sostituto             |
|----------------|-----------------------|
| Menu DVD       | Menu / Home           |
| Master         | Vol+                  |
| Master volume- | Vol-                  |
| Mute           | Mute / Dimmer         |
| Channel+ DVD   | CH+ / Page+           |
| Channel- DVD   | CH- / Page-           |
| Up DVD         | Up                    |
| Down DVD       | Down                  |
| Right DVD      | Right                 |
| Left DVD       | Left                  |
| Enter DVD      | OK                    |
| Pause DVD      | Pause / Step / Freeze |
| Rec DVD        | Rec / Rec Mode        |
| Play DVD       | Play / Slow           |
| << DVD         | << / Tune-            |
| >> DVD         | >> / Tune+            |
| Stop DVD       | Stop / Hold           |



 



 


 
 


 
 



 



 



 



 



 









 

 



 

 
 


 

 

 











| Originale                                                                           |              | Sostituto                                                                           |                           | Originale                                                                             |           | Sostituto                                                                             |                        |
|-------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|---------------------------|---------------------------------------------------------------------------------------|-----------|---------------------------------------------------------------------------------------|------------------------|
|    | >>I DVD      |    | >>I / Preset+             |    | Down VCR  |    | Shift + Down           |
|    | I<< DVD      |    | I<< / Preset-             |    | Right VCR |    | Shift + Right          |
|    | Power VCR    |   | Shift + Power             |    | Left VCR  |    | Shift + Left           |
|    | 1 VCR        |    | Shift + 1                 |    | Enter VCR |    | Shift + OK             |
|    | 2 VCR        |    | Shift + 2                 |    | Pause VCR |    | Shift + Pause / Step / |
|    | 3 VCR        |    | Shift + 3                 |    | Play VCR  |    | Shift + Play /         |
|    | 4 VCR        |    | Shift + 4                 |    | Stop VCR  |    | Shift + Stop /         |
|    | 5 VCR        |    | Shift + 5                 |    | << VCR    |    | Shift + << /           |
|    | 6 VCR        |    | Shift + 6                 |    | >>I VCR   |    | Shift + >>I / Preset+  |
|    | 7 VCR        |    | Shift + 7                 |    | >> VCR    |    | Shift + >> /           |
|   | 8 VCR        |   | Shift + 8                 |   | I<< VCR   |   | Shift + I<< / Preset-  |
|  | 9 VCR        |  | Shift + 9                 |  | Rec VCR   |  | Shift + Rec / Rec Mode |
|  | 0 VCR        |  | Shift + 0                 |                                                                                       |           |                                                                                       |                        |
|  | Disc VCR     |  | Shift + Fav / Marker / PC |                                                                                       |           |                                                                                       |                        |
|  | Channel+ VCR |  | Shift + CH+ /             |                                                                                       |           |                                                                                       |                        |
|  | Channel- VCR |  | Shift + CH- /             |                                                                                       |           |                                                                                       |                        |
|  | Up VCR       |  | Shift + Up                |                                                                                       |           |                                                                                       |                        |









 







 



 

 







 









| Originale                                                                           |                | Sostituto                                                                           |                    | Originale                                                                             |             | Sostituto                                                                             |                       |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|--------------------|---------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------|-----------------------|
|    | Power CD       |    | Power              |    | Channel- CD |    | CH- / Page-           |
|    | 1 CD           |    | 1                  |    | Up CD       |    | Up                    |
|    | 2 CD           |    | 2                  |    | Down CD     |    | Down                  |
|    | 3 CD           |    | 3                  |    | Right CD    |    | Right                 |
|    | 4 CD           |    | 4                  |    | Left CD     |    | Left                  |
|    | 5 CD           |    | 5                  |    | Enter CD    |    | OK                    |
|    | 6 CD           |    | 6                  |    | Pause CD    |    | Pause / Step / Freeze |
|    | 7 CD           |    | 7                  |    | Play CD     |    | Play / Slow           |
|    | 8 CD           |    | 8                  |    | << CD       |    | << / Tune-            |
|   | 9 CD           |   | 9                  |   | >> CD       |   | >> / Tune+            |
|  | 0 CD           |  | 0                  |  | Stop CD     |  | Stop / Hold           |
|  | +10 CD         |  | Guide / EPG / -/-- |  | I<< CD      |  | I<< / Preset-         |
|  | Disc CD        |  | Fav / Marker / PC  |  | >>I CD      |  | >>I / Preset+         |
|  | Master         |  | Vol+               |  | Power TVC   |  | Shift + Power         |
|  | Master Volume- |  | Vol-               |  | 1 TVC       |  | Shift + 1             |
|  | Mute           |  | Mute / Dimmer      |  | 2 TVC       |  | Shift + 2             |
|  | Channel+ CD    |  | CH+ / Page+        |  | 3 TVC       |  | Shift + 3             |







 






 
 

 



 
 
 
 
 
 


 












| Originale                                                                                          | Sostituto                                                                                         |
|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
|  Power TUN        |  Power           |
|  1 TUN            |  1               |
|  2 TUN            |  2               |
|  3 TUN            |  3               |
|  4 TUN            |  4               |
|  5 TUN            |  5               |
|  6 TUN            |  6               |
|  7 TUN            |  7               |
|  8 TUN            |  8               |
|  9 TUN           |  9              |
|  0 TUN          |  0             |
|  Master         |  Vol+          |
|  Master volume- |  Vol-          |
|  Mute           |  Mute / Dimmer |
|  TUNE+ TUN      |  >> / Tune+    |
|  TUNE- TUN      |  << / Tune-    |
|  ST+ TUN        |  >>I / Preset+ |

| Originale                                                                                        | Sostituto                                                                                                 |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  ST- TUN      |  I<< / Preset-         |
|  D.Access TUN |  Play / Slow           |
|  Band TUN     |  Pause / Step / Freeze |
|  Class TUN    |  Stop / Hold           |
|  MPX TUN      |  Rec / Rec Mode        |
|  Display TUN  |  Display / Media       |
|  RF ATT TUN   |  Smart / List          |
|  Power CDR    |  Shift + Power         |
|  1 CDR        |  Shift + 1             |
|  2 CDR       |  Shift + 2            |
|  3 CDR      |  Shift + 3           |
|  4 CDR      |  Shift + 4           |
|  5 CDR      |  Shift + 5           |
|  6 CDR      |  Shift + 6           |
|  7 CDR      |  Shift + 7           |
|  8 CDR      |  Shift + 8           |
|  9 CDR      |  Shift + 9           |



