



 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		Info		Info
	Mute		Mute		Down / P-		Down
	TV		TV/R		Down / P-		Ch -
	Pause		Pause		Menu		Menu
	Radio		Shift + TV/R		1		1
	AV		AV		2		2
	Text		Text		3		3
	Swap		Back		4		4
	List		List		5		5
	Up / P+		Up		6		6
	Up / P+		Ch +		7		7
	Exit		Exit		8		8
	Left / Vol-		Left		9		9
	Left / Vol-		Vol -		0		0
	OK		Ok				
	Right / Vol+		Right				
	Right / Vol+		Vol +				

