

 




















 















































Originale	Sostituto
 Standby / On	 Power
 Title/Speed	 Shift + Sound / Title
 Mark / Index	 Fav / Marker / PC
 >> / >>>	 >> / Preset+
 << / <<<	 << / Preset-
 TV Mute	 Mute / Dimmer
 Disc Menu	 D.Menu / Top
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 Input Sel.	 AV / Input / RDS
 Display	 Display / Media
 Zoom	 Zoom / Size
 3D Sound	 Sound / Title
 Subtitle	 Subtitle / EQ
 Vol+	 Vol+
 Vol-	 Vol-
 TRK/Prog+	 CH+ / Page+
 TRK/Prog-	 CH- / Page-
 Up	 Up
 Left	 Left
 Setup / Enter	 OK
 Setup / Enter	 Setup / OPT /
 Right	 Right
 Down	 Down
 Return / A.Dub	 Back / Return





Originale	Sostituto
 Screen Fit / SVHS	 Picture / Format
 TV / VCR	 TV/Radio /
 Angle	 Info / Angle
 Open / Close	 Eject / Surround
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 << / <<	 << / Tune-
 >> / >>	 >> / Tune+
 Audio	 Audio / Lang I/II
 DVD	 Shift + 2
 VCR	 Shift + 4
 Mode / Repeat	 Green / APP / Repeat

Originale	Sostituto

