




























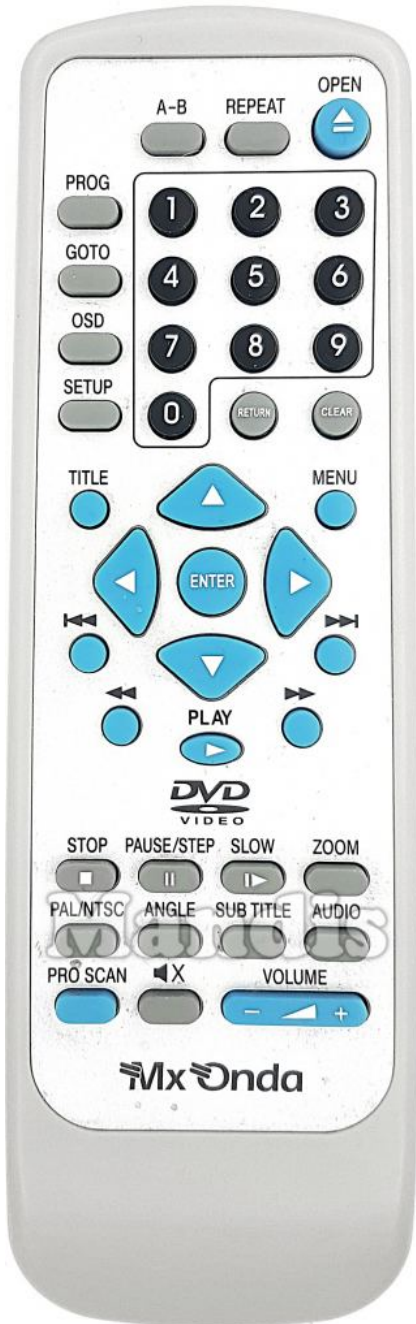



Originale	Sostituto	Originale	Sostituto
	A-B		Yellow / YouTube / Repeat
	Open		Eject / Surround
	Repeat		Green / APP / Repeat
	Prog		TV/Radio /
	Goto		Text / Goto
	Setup		Setup / OPT /
	OSD		Display / Media
	Return		Back / Return
	Clear		Exit / Cancel / Clear
	Menu		Menu / Home
	Title		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originale	Sostituto	Originale	Sostituto
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Down		Down
	Enter		OK
	Right		Right
	Left		Left
	I<<		I<< / Preset-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Slow		Shift + Play / Slow



**Originale****Sostituto**

	Zoom		Zoom / Size
	PAL/NTSC		Picture / Format
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Pro Scan		Smart / List
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-

Originale**Sostituto**

