














 









 




Originale	Sostituto	Originale	Sostituto
 Power	 Power		
 Input	 AV / Input / RDS		
 Mobile	 Display / Media		
 Internet Radio	 TV/Radio /		
 Songbird	 Setup / OPT /		
 Right	 Right		
 Left	 Left		
 Clock	 Sleep / Timer		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Vol+	 Vol+		
 Vol-	 Vol-		
 Mute	 Mute / Dimmer		

Originale	Sostituto

