









 

 




 
 

 






 











Originale	Sostituto
 Bass Bost	 Subtitle / EQ
 Display	 Display / Media
 Power	 Power
 Tune Memory N. 1	 1
 Tune Memory N. 2	 2
 Tune Memory N. 3	 3
 Tune Memory N. 4	 4
 Tune Memory N. 5	 5
 Tune Memory N. 6	 6
 FM	 Shift + 6
 AM	 Shift + 1
 AUDIO IN	 Shift + 2
 CD	 Shift + 3
 USB	 8
 USB	 Shift + 8
 Tuner Memory	 Smart / List
 Clear	 Exit / Cancel / Clear

Originale	Sostituto
 Up / Folder+	 Up
 Play Mode / Tuning Mode	 Setup / OPT /
 Repeat / FM Mode	 Green / APP / Repeat
 Left	 Left
 OK	 OK
 Right	 Right
 Volume+	 Vol+
 Return	 Back / Return
 Down / Folder-	 Down
 Timer Menu	 Menu / Home
 Volume-	 Vol-
 I<< / -	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I / +	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+





Originale		Sostituto		Originale		Sostituto	
	Sleep		Sleep / Timer				
	Stop		Stop / Hold				

