



Originale	Sostituto
Power	Power
ATV	Display / Media
DTV	D.Menu / Top
HDMI	Shift + 0
Sleep	Sleep / Timer
Input	AV / Input / RDS
Sound	Sound / Title
Picture	Picture / Format
Zoom	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
0	0
Recall	Back / Return
Info	Info / Angle
Freeze	Pause / Step / Freeze
Subtitle	Subtitle / EQ
Nicam	Audio / Lang I/II
Vol +	Vol+
Vol -	Vol-
Mute	Mute / Dimmer
Prog +	CH+ / Page+
Prog -	CH- / Page-
Navegacion Subir	Up
Navegacion Bajar	Down
Navegacion	Right
Navegacion	Left
OK	OK





Originale	Sostituto
	Menu / Home
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Shift + CH+ /
	Shift + CH- /
	<< / Tune-
	>> / Tune+
	Fav / Marker / PC
	Smart / List
	Guide / EPG / -/--

Originale	Sostituto
	TV/Radio /

