



Originale	Sostituto
Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Vol+ TV	Vol+
TV/VCR	Smart / List
0	0
AV	AV / Input / RDS
Vol- TV	Vol-
Backward	<< / Tune-

Originale	Sostituto
Forward	>> / Tune+
Skip I<<	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display / CLK/CNT	Display / Media
Up/+ PR/TRK	CH+ / Page+
Up/+ PR/TRK	Up
i/Setup	Setup / OPT /
Left	Left
OK/Enter	OK
Right	Right
Disc Menu	D.Menu / Top
Down/- PR/TRK	CH- / Page-
Down/- PR/TRK	Down
Return	Back / Return
















Originale		Sostituto	
AUDIO	O)))/Audio	LANG I/II AUDIO	Audio / Lang I/II
SUBTITLE	[...]/Subtitle	EQ SUBTITLE	Subtitle / EQ
ANGLE	Camera/Angle	ANGLE INFO	Info / Angle
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
REC/ITR	Rec/ITR	REC MODE	Rec / Rec Mode
LOCK	Lock	GOTO TEXT	Text / Goto
TITLE	Title	TITLE SOUND	Sound / Title
PROGRAM	Program	PROGRAM TV/RADIO	TV/Radio /
MARKER	Marker	PC FAV MARKER	Fav / Marker / PC
SEARCH	Search	NETFLIX SEARCH	Red / Netflix / Search
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A - B LP	A-B/LP	YouTube REPEAT A-B	Yellow / YouTube / Repeat
RANDOM CM SKIP	Random/CM	Prime Video RANDOM	Blue / Prime Video / Random
*	*	TIMER SLEEP	Sleep / Timer
RESOLUTION	Resolution	FORMAT PICTURE	Picture / Format





 







 

 

 

 

 

Originale		Sostituto	







Originale	Sostituto
 Power VCR	 Power
 Eject VCR	 Eject / Surround
 1 VCR	 1
 2 VCR	 2
 3 VCR	 3
 4 VCR	 4
 5 VCR	 5
 6 VCR	 6
 7 VCR	 7
 8 VCR	 8
 9 VCR	 9
 Vol+ TV	 Vol+
 0 VCR	 0
 Vol- TV	 Vol-
 << Backward	 << / Tune-
 >> Forward	 >> / Tune+
 Pause/Step VCR	 Pause / Step / Freeze

Originale	Sostituto
 Play VCR	 Play / Slow
 Stop VCR	 Stop / Hold
 Display VCR	 Display / Media
 i/Setup VCR	 Setup / OPT /
 O)/Audio VCR	 Audio / Lang I/II
 Rec/ITR	 Rec / Rec Mode
 Search VCR	 Red / Netflix / Search
 Clear VCR	 Exit / Cancel / Clear
 Repeat VCR	 Green / APP / Repeat
 A-B/LP VCR	 Yellow / YouTube / Repeat
 Random/CM Skip	 Blue / Prime Video / Random





Originale		Sostituto	
	Power TV		Power
	AV TV		AV / Input / RDS
	PR+ TV		CH+ / Page+
	PR- TV		CH- / Page-
	Vol+ TV		Vol+
	TV/VCR		TV/Radio /
	Vol- TV		Vol-

Originale	Sostituto

