
















 

 
 

 




 








Originale	Sostituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 I - II	 Audio / Lang I/II
 Fav	 Fav / Marker / PC
 AV / Source	 AV / Input / RDS
 TV / DTV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Red / Page+	 Red / Netflix / Search
 Red / Page+	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 Green / Page-	 Shift + CH- /
 Green / Page-	 Green / APP / Repeat

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 Yellow	 Yellow / YouTube / Repeat
 -/-- / Exit	 Shift + Guide / EPG / -/--
 -/-- / Exit	 Exit / Cancel / Clear
 0	 0
 M	 Menu / Home
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK / Select	 OK
 Right	 Right
 Down	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-
 V-	 Vol-





Originale	Sostituto
V+	Vol+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
LIB	Display / Media
Rec	Rec / Rec Mode
<<<	<<< / Tune-
>>>	>>> / Tune+
Time	Sleep / Timer
PIP-	I<<< / Preset-
PIP+	>>>I / Preset+
P<P / Swap	Back / Return
PP	Eject / Surround
Text	Text / Goto
Subpage	Subtitle / EQ
Hold	Shift + Stop /
Cancel	Shift + Exit / Cancel / Clear

Originale	Sostituto
Size / Wide	Zoom / Size
Reveal / PIP	Shift + AV / Input / RDS
Index / Guide	Guide / EPG / -/-
Mix / PIP	Picture / Format

