



Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Power Tv		Shift + Power		+10		Guide / EPG / -/-
	Tv/Video Tv		Shift + TV/Radio / Program		Disc/CD Mode		Blue / Prime Video / Random
	DVD/2nd Select		Red / Netflix / Search		Select >		CH+ / Page+
	FM/AM		Green / APP / Repeat		< Select		CH- / Page-
	iPod		Yellow / YouTube / Repeat		Vol+		Vol+
	Vol+ Tv		Shift + Right		Vol-		Vol-
	Vol- Tv		Shift + Left		I<<		I<< / Preset-
	1		1		>>I		>>I / Preset+
	2		2		<<		<< / Tune-
	3		3		>>		>> / Tune+
	4		4		Stop		Stop / Hold
	5		5		Pause		Pause / Step / Freeze
	6		6		Play		Play / Slow
	7		7		Setup		Setup / OPT /
	8		8		One Touch Play		Fav / Marker / PC
	9		9		Menu/Play List		Menu / Home





	Originale	Sostituto	Originale	Sostituto
	Return	Back / Return		
	Top Menu/Direct Navigator	Smart / List		
	Start	Info / Angle		
	Functions	D.Menu / Top		
	Up	Up		
	Down	Down		
	Right/ >	Right		
	Left/<	Left		
	OK	OK		
	Sound	Sound / Title		
	Dolby PLII	Subtitle / EQ		
	Play Mode/Repeat	Text / Goto		
	FL Display	Zoom / Size		
	Cancel	Exit / Cancel / Clear		
	W.S./Sleep	TV/Radio /		
	Level/Subwoofer/ CH Select	Picture / Format		
	Muting	Mute / Dimmer		

