



Originale	Sostituto
1 Disc Direct Play 1	Red / Netflix / Search
2 Disc Direct Play 2	Green / APP / Repeat
3 Disc Direct Play 3	Yellow / YouTube / Repeat
1	1
CD Edit/Check	Setup / OPT /
PRGM	TV/Radio /
2	2
Random/Repeat	Text / Goto
3	3
GEQ	AV / Input / RDS
4	4
5	5
T-Bass	Audio / Lang I/II
6	6
Timer	Shift + Sleep / Timer
7	7
Sleep	Sleep / Timer

Originale	Sostituto
8	8
9	9
Clock	Picture / Format
0	0
Mono Tuner	Subtitle / EQ
+10	Guide / EPG / -/-
Band	Back / Return
Function	Menu / Home
Pause	Pause / Step / Freeze
Power	Power
Vol+	Vol+
Vol-	Vol-
Preset	Fav / Marker / PC
Tuning Up	Up
Play	Play / Slow
Tuning Down	Down
Clear	Exit / Cancel / Clear





	Originale	Sostituto	Originale	Sostituto
	Stop	Stop / Hold		
	>>	>> / Tune+		
	>>	>>  / Preset+		
	<<	<< / Preset-		
	<<	<< / Tune-		
		Zoom / Size		

