

















































Originale		Sostituto		Originale		Sostituto	
	Power		Power		F[...]		Menu / Home
	1		1		Vol-		Vol-
	2		2		Vol+		Vol+
	3		3		Mute		Mute / Dimmer
	4		4		→←		Display / Media
	5		5		0		Info / Angle
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	-/--		Guide / EPG / -/--				
	[.] / [▼]		Smart / List				
	TV Source		AV / Input / RDS				
	P↔P		Fav / Marker / PC				
	P+		CH+ / Page+				
	P-		CH- / Page-				

