



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Red		Red / Netflix / Search
	1		1		Green		Green / APP / Repeat
	2		2		Yellow		Yellow / YouTube / Repeat
	3		3		Blue		Blue / Prime Video / Random
	4		4		Guide		Guide / EPG / -/-
	5		5		Rec List		Smart / List
	6		6		Source		AV / Input / RDS
	7		7		*		Menu / Home
	8		8		Micro		Display / Media
	9		9		Up		Up
	0		0		Down		Down
	[i+]		Info / Angle		Right		Right
	[=]		Text / Goto		Left		Left
	YouTube		Shift + Yellow / YouTube /		OK		OK
	Netflix		Shift + Red / Netflix /		Back		Back / Return
	Disney Plus		Shift + Green / APP /		TV		TV/Radio /
	prime video		Shift + Blue / Prime Video /		Home		Shift + Menu / Home
			Random				





Originale		Sostituto		Originale		Sostituto	
	Vol+		Vol+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	Recall		Fav / Marker / PC				
	CH+		CH+ / Page+				
	CH-		CH- / Page-				
	Audio		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	Help		Zoom / Size				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Exit		Exit / Cancel / Clear				

