
 




 

 



 

 



 

 






 


 






Originale	Sostituto	Originale	Sostituto
	Power		Red / Netflix / Search
	1		Green / APP / Repeat
	2		Yellow / YouTube / Repeat
	3		Blue / Prime Video / Random
	4		Guide / EPG / -/-
	5		Smart / List
	6		AV / Input / RDS
	7		Menu / Home
	8		Display / Media
	9		Up
	0		Down
	Info / Angle		Right
	Text / Goto		Left
	Shift + Yellow / YouTube /		OK
	Shift + Red / Netflix /		Back / Return
	Shift + Green / APP /		TV/Radio /
	Shift + Blue / Prime Video / Random		Shift + Menu / Home



