 

 

 

 

 

 

 

 

 

 

 

 



 





 

 









 

 









 

 











 

 

























Originale	Sostituto
 Standby	 Power
 OSD	 Display / Media
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 10+	 Guide / EPG / -/-
 Time	 Sleep / Timer
 Setup	 Setup / OPT /
 Title	 Sound / Title

Originale	Sostituto
 Zoom	 Zoom / Size
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 HDMI	 Shift + 0





Originale	Sostituto
 DVD/USB	 Shift + 2
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 PBC	 Fav / Marker / PC
 Return	 Back / Return
 Language	 Audio / Lang I/II
 A-B	 Yellow / YouTube / Repeat
 Slow	 Shift + Play /
 Repeat	 Green / APP / Repeat
 L/R	 Picture / Format
 Video	 Shift + 4
 Prog	 TV/Radio /
 N/P	 Red / Netflix / Search

Originale	Sostituto

